


PROPORTIONAL PRESSURE REDUCING VALVES

Valve model:  
DHRZO-AEB


Driver model:  
E-RI-AEB

IDENTIFICATION


Valve identification plates and label

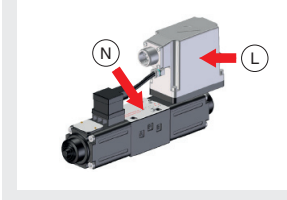



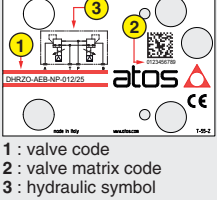


Valve name plate : N

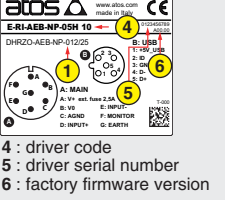






Driver label : L



INSTALLATION TOOLS ACCORDING TO VALVE MODEL- not included

Fastening bolts	Wrenches	Main connectors		IO-Link connector IL
				
see STEP 1 and STEP 3		see STEP 2.1		see STEP 2.2

PROGRAMMING TOOLS - not included


PC software	mobile App	Bluetooth	OR	USB connection KIT	
					
E-SW-SETUP	Atos CONNECT	E-A-BTH		E-C-SB-USB/M12	E-A-SB-USB/OPT

NOTE: Atos CONNECT supports Atos digital valve drivers equipped with E-A-BTH or with built-in Bluetooth, see STEP 5

PC SOFTWARE

E-SW-SETUP	supports	<b>NP</b> (USB)	<b>IL</b> (IO-Link)	<b>PS</b> (Serial)	<b>IR</b> (Infrared)
		<b>BC</b> (CANopen)	<b>BP</b> (PROFIBUS DP)	<b>EH</b> (EtherCAT)	
		<b>EW</b> (POWERLINK)	<b>EI</b> (EtherNet/IP)	<b>EP</b> (PROFINET RT/IRT)	
	supports	valves with <b>SP, SF, SL</b> alternated p/Q control			
<b>REMARK</b> Atos PC software is designed for Windows based operative systems - Windows 10 or later					

PC SOFTWARE DOWNLOAD



Download PC software at [www.atos.com](http://www.atos.com) accessing to "MyAtos -> Download area electronics"

Free registration by filling the form at [www.atos.com/en-it/login](http://www.atos.com/en-it/login)

E-SW-SETUP is free and available in Download area

RELATED DOCUMENTATION - [www.atos.com](http://www.atos.com)


FS900	Operating and maintenance information - tech. table	STARTUP BLUETOOTH	Bluetooth adapter startup guide
FS025	DHRZO 3-way reducing - tech. table	E-MAN-RI-AEB	AEB - driver operating manual
P005	Mounting surface - tech. table	E-MAN-S-IL	IO-Link protocol programming manual
GS500	Programming tools - tech. table		
GS520	IO-Link features - tech. table		
K800	Electric and electronic connectors - tech. table		


ATTENTION !


The purpose of this quickstart guide is show a logical sequence of basic operations. This guide does not cover all details or variants of Atos valves. All operations described in this document should be performed only by qualified personnel. Operations and images could be subject to change without notice. For further information please refer to related documentation.


CONTACT US


PRODUCTS OVERVIEW

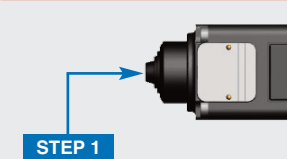


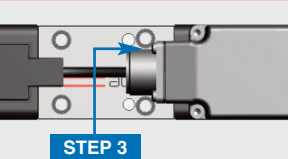




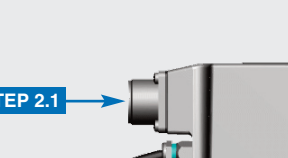




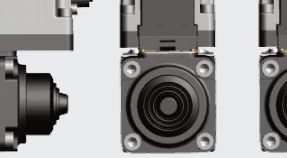

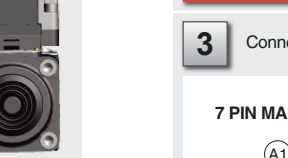

INSTALLATION			PROGRAMMING	
STEP 1	STEP 2	STEP 3	STEP 4	STEP 5
MECHANICAL	ELECTRICAL	HYDRAULICS	PC SOFTWARE	MOBILE APP


STEP 1 MECHANICAL

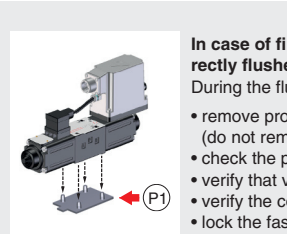

In case of first commissioning, before the valve installation the whole system must be correctly flushed to grant the required cleanliness level

During the flushing operation use on-off or by-pass valves in place of the proportional valve

- remove protection pad **P1** located on the valve bottom face only immediately before installation (do not remove connectors caps)
- check the presence and correct positioning of the seals on valve ports
- verify that valve mounting surface is clean and free from damages or burrs
- verify the correct valve orientation according to the pattern of the relevant mounting interface
- lock the fastening bolts respecting below sequence and tightening torque according to valve model

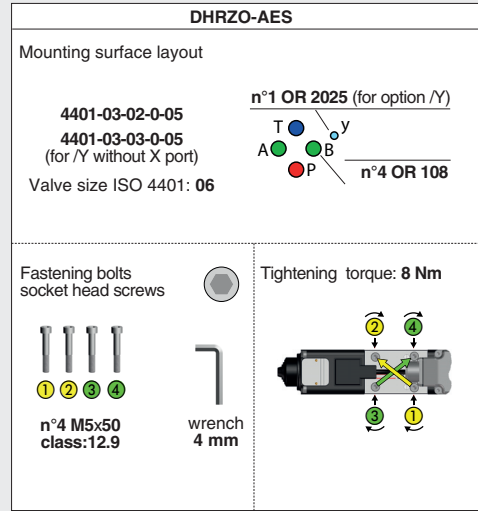

Mounting surface layout

4401-03-02-0-05  
4401-03-03-0-05 (for /Y without X port)  
Valve size ISO 4401: 06

n°1 OR 2025 (for option /Y)  
n°4 OR 108

Fastening bolts  
socket head screws

Tightening torque: 8 Nm

n°4 M5x50  
class:12.9

wrench  
4 mm


STEP 2 ELECTRICAL


This section considers the different valves options, illustrating the multiple variants of the available electrical connections. The electrical connections have to be wired according to the selected valve code

2.1 MAIN CONNECTOR - only for NP

1


Remove main connector cap **P2**

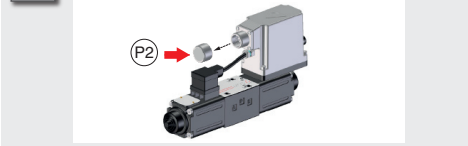



2

Select main connector according to valve code and proceed with wirings operations

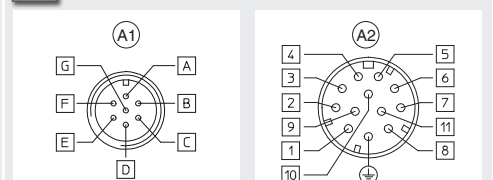


Recommended LiVCY shielded cables:  
7 x 0,75 mm² max 20 m  
7 x 1 mm² max 40 m


Standard	/Z option
A V+ (power supply 24Vdc)	1 V+ (power supply 24Vdc)
B V0 (power supply 0Vdc)	2 V0 (power supply 0Vdc)
C AGND (input 24Vdc)	3 ENABLE (input 24Vdc)
D INPUT+ (±10Vdc / 4 ÷ 20mA)	4 INPUT+ (±10Vdc / 4 ÷ 20mA)
E INPUT- (±10Vdc / 4 ÷ 20mA)	5 INPUT- (±10Vdc / 4 ÷ 20mA)
F MONITOR (±5Vdc 1V=1A)	6 MONITOR (±5Vdc 1V=1A)
G EARTH	7 NC
	8 NC
	9 VL+ (logic power supply 24Vdc)
	10 VL0 (logic power supply 0Vdc)
	11 FAULT (output 24Vdc)
	PE EARTH

3

Connect the valve to the system

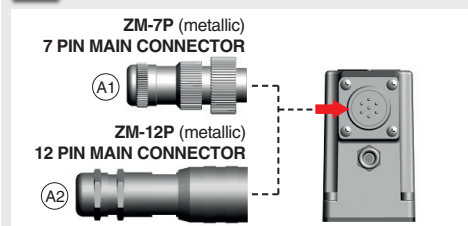

NOTE: the use of above metallic connectors is strongly recommended in order to fulfill EMC requirements



ELECTRICAL WIRING EXAMPLES

MAIN CONNECTOR - VOLTAGE

REFERENCE INPUT - DIFFERENTIAL MODE

cabinet side	main connector pin-out	valve internal circuit
±10 Vdc Ref. ⊕ Ref. ⊖	std : /Q /Z	INPUT+ 50K INPUT- 50K

REFERENCE INPUT - COMMON MODE

cabinet side	main connector pin-out	valve internal circuit
±10 Vdc Ref. ⊖ ⊥ (0 V)	std : /Q /Z	INPUT+ 50K INPUT- 50K AGND / V0 / VL0

MAIN CONNECTOR - CURRENT

REFERENCE INPUT - DIFFERENTIAL MODE

cabinet side	main connector pin-out	valve internal circuit
4÷20 mA Ref. ⊕ Ref. ⊖	std : /Q /Z	INPUT+ INPUT- Rsh = 500 ohm

REFERENCE INPUT - COMMON MODE

cabinet side	main connector pin-out	valve internal circuit
4÷20 mA Ref. ⊖ ⊥ (0 V)	std : /Q /Z	INPUT+ INPUT- AGND / V0 / VL0 Rsh = 500 ohm

MAIN CONNECTOR - MONITORS VOLTAGE ONLY


MONITOR OUTPUT

cabinet side	main connector pin-out	valve internal circuit
±5 Vdc Mon. ⊖ ⊥ (0 V)	std : /Q /Z	MONITOR AGND / V0 / VL0

2.2 IO-Link CONNECTOR - only for IL


1

Remove IO-Link connector caps **P3**

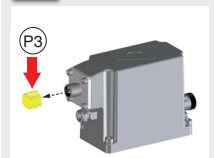

2

Proceed with wirings operations

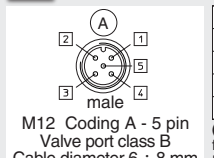


1 L+	(power supply 24Vdc - IO-Link)
2 P24	(power supply 24Vdc - others) (1)
3 L-	(power supply 0Vdc - IO-Link)
4 CQ	IO-Link data-line
5 N24	(power supply 0Vdc - others) (1)


(1) max power consumption 50 W; for master ports class A connect P24/N24 to an external power supply

3

Connect the valve to the IO-Link network of the system



STEP 3 HYDRAULICS

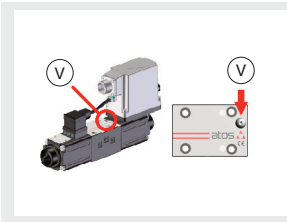

Wrenches types

DHRZO

3 mm

Tightening torque

4 Nm

Air bleeding:

- release 2 or 3 turns the air bleed screw **V**
- cycle the valve at low pressure until the oil leaking from the **V** port is exempted from air bubbles
- lock the air bleed screw **V**

NOTE: to facilitate bleeding operations, apply a light backpressure (1 or 2 bar) on T port by adding a check valve on T line

Consult tech table **FS900** for general guidelines about component's commissioning


STEP 4 PC SOFTWARE

**REMARK** proportional valves with on-board electronics are factory preset with default parameter and ready to use after piping and electrical connections. **Play with parameters is optional, not mandatory!**

4.1 CONNECTION


- 1** In order to access valve parameterization:
- Install E-SW-SETUP software on PC
  - Insert main connector or IO-Link connector to the valve and power on with 24Vdc

- 2** Remove USB plastic protection cap **P4** and connect valve to the PC as show below via Bluetooth (adapter only) or USB (cable and isolator adapter)

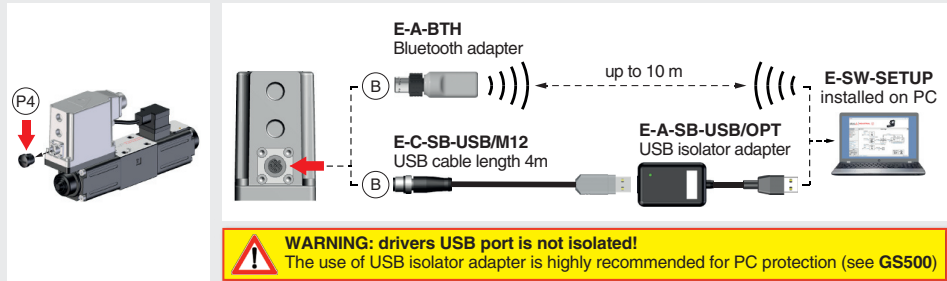

- 3** Launch the PC software using E-SW-SETUP icon:
- **PC software does NOT detect valid connection** communication is not established, please follow wizard procedure
  - **PC software detects valid connection** communication automatically established - valve is **ON-LINE** see **5**

- 4** In **ON-LINE - Wizard** press button:
- a** : **WIRELESS CONNECTION** Wizard procedure for connection via Bluetooth
  - b** : **CABLE CONNECTION** Wizard procedure for connection via USB cable

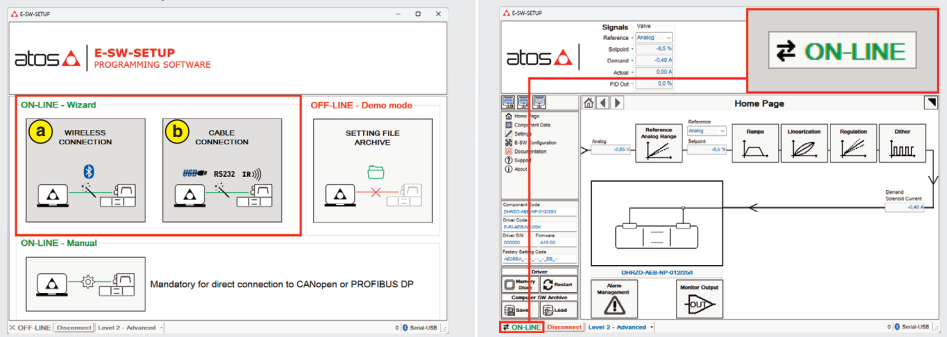


**NOTE:** for more info about E-A-BTH Bluetooth adapter, please refer to STARTUP BLUETOOTH guide

**REMARK:** once removed the E-A-BTH Bluetooth adapter or E-C-SB-USB/M12 USB cable, screw the plastic protection cap **P4** applying the correct tightening torque, in order to preserve valve's IP protection characteristics



4.2 CONFIGURATION


Single solenoid reducing valve,  
2 positions

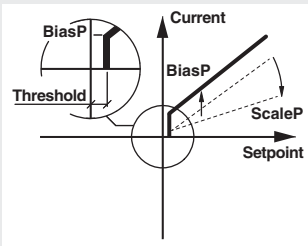

**BiasP** positive bias  
**ScaleP** positive scale

**Threshold** = 2%  
(200mV or 0,32mA for /I option)

Double solenoid reducing valve,  
3 positions

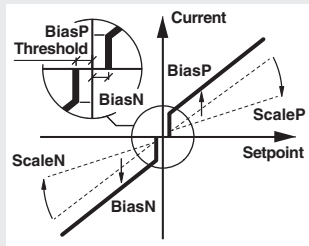

**BiasP** positive bias  
**ScaleP** positive scale  
**BiasN** negative bias  
**ScaleN** negative scale

**Threshold** = 2%  
(±200mV or ±0,16mA for /I option)

BIAS AND SCALE - 2 POSITION VALVES

**Bias setting:** supply input signal just over the Threshold value; increase the Bias until the pressure starts to increase, then lightly reduce the Bias just to bring back the pressure lightly over the minimum regulated value

**Scale setting:** supply the max input signal; adjust the Scale to obtain the max regulated pressure

BIAS AND SCALE - 3 POSITION VALVES

Follow the same indications reported for 2 position valves for both valve's solenoids

RAMPS

**Ramps setting:** select the required ramp configuration and adjust the ramp time to optimize the pressure response according to the system characteristics

**No Ramp** : no ramps selected

**Single Ramp** : setup **Ramp 1**

**Double Ramp** : setup **Ramp 1 and 2**

**Four Ramps** : setup **Ramp 1, 2, 3 and 4** (only 3 position)


DITHER

**Dither setting:** factory default 200 Hz

- lower frequencies reduce the hysteresis of the valve, too low values can affect the valve stability
- higher frequencies increase regulation stability, but increase also the hysteresis of the valve

WIZARD REFERENCE - E-SW-SETUP - only for NP

Reference input signal is factory preset according to selected valve code, defaults are ±10 Vdc for standard and 4 ÷ 20 mA for /I option. Input signal can be reconfigured via PC software selecting between voltage and current, browsing to **Reference Analog Range** page:

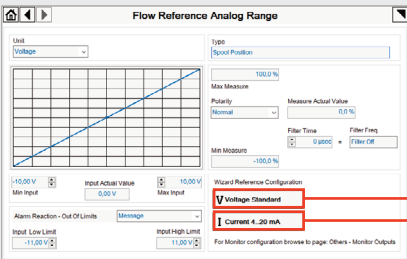

press **Voltage Standard** button to automatically set the analog input signal to voltage

**V Voltage Standard**

press **Current 4..20 mA** button to automatically set the analog input signal to current

**I Current 4..20 mA**

**REMARK:** **Voltage Standard** or **Current 4..20 mA** buttons do not act on Monitor output signal configuration! For Monitor output signal configuration browse to page **Others - Monitor Output**

4.3 STORE

Parameters modifications will be stored into driver permanent memory:

- press **Memory Store** button to access **Driver - Memory Save** window
- press **Save User Set** button to store **Valve Parameters**

**WARNING:** during valve parameters storing operations, the driver automatically shuts down the solenoid power supply for a short time. Do not perform any storing commands while the system is working.

4.4 BACK UP

Parameter modifications will be saved into PC memory:

- press **Save** button to access **Computer SW Archive - Setting Files** page, **Setting File Name** pop-up appears
- input a valid name into **Description** field and press **Ok** button

STEP 5 MOBILE APP

**ATOS CONNECT** for smartphones and tablets is a free downloadable app which allows quick access to valve main functional parameters and configuration via Bluetooth, thus avoiding physical cable connection and significantly reducing commissioning times.

**ATOS CONNECT** app requirements:

- iOS 14 / Android 9
- Bluetooth Low Energy (BLE), version 4.2 or higher
- Atos digital valves/drivers equipped with E-A-BTH Bluetooth adapter or with built-in Bluetooth




HINT ! - Wizard objects dictionary - only for IL

Press **CTRL + H** on the PC keyboard to open the context help form

Move arrow on parameter (e.g. **Ramp Type**) to display the objects dictionary information to access the parameter via IO-Link

If present **List**, press **→** to display values accepted by the parameter

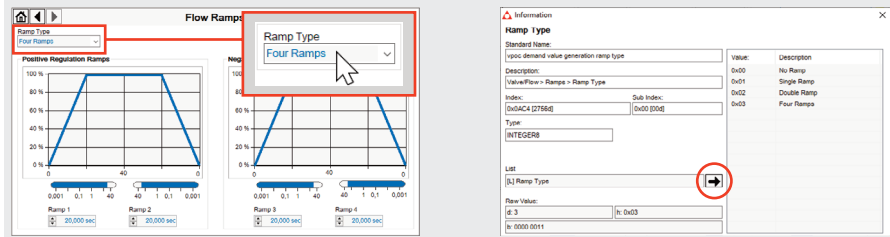

**NOTE:** alternatively right click on any parameter

TROUBLESHOOTING

Valve vibration or noise

- presence of air in the solenoid; perform air bleeding procedure – see STEP 3
- dither frequency too low; increase value of the frequency – see STEP 4.2

The valve does not follow the reference signal

- valve is powered off, verify presence of 24 Vdc power supply
- valve is disabled, verify presence of 24 Vdc on enable pin - only for /Q and /Z options
- flow/pressure values exceeding the valve's performance limits, verify that hydraulic operating conditions are in compliance with the valve's characteristics
- big hysteresis or spool stick-slip, reduce the dither frequency
- spool sticking, contact Atos service center

PC software parameters modifications are lost when valve is switched off

- parameter store operation was not performed, check store procedure – see STEP 4, section 4.3

PC software parameters modifications have no effect on the valve

- valve is OFF LINE, check connection procedure – see STEP 4, section 4.1

After the modifications of PC software parameters the valve does not work properly

- restore valve factory parameters using 'Load Factory Set' button, located in 'Driver - Memory Save' window:
  - during restore, the current to the solenoid(s) will be temporarily switched to off!
  - factory parameters will be applied at next driver restart or after power off-on sequence!