



| DIN-RAIL DIGITAL DRIVER FOR DIRECTIONAL AND FLOW VALVES | | | | | |
|--|--|--|---|--|--|
| Industrial driver models: E-BM-TES/LES-N without alternated p/Q control SN E-BM-TES/LES-S with alternated p/Q control SP, SF, SL | | | Ex-Proof driver models: E-BM-TES/LES-N /A without alternated p/Q control SN E-BM-TES/LES-S /A with alternated p/Q control SP, SF, SL | | |
| Industrial valve models: Direct operated DLHZO-T DHZO-T QVHZO-T DLKZOR-T DKZOR-T QVKZOR-T Pilot operated DPZO-T LIQZP-L DPZO-L | | | Ex-Proof valve models: Direct operated DLHZA-T DHZA-T QVHZA-T DLKZA-T DKZA-T QVKZA-T Pilot operated DPZA-T LIQZA-L DPZA-L | | |

IDENTIFICATION

Driver identification label

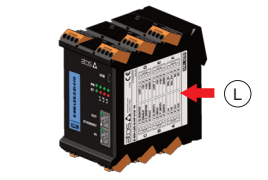

Driver label : L

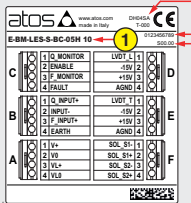




1 : driver code

2 : factory set code







3 : driver serial number

4 : factory firmware version

INSTALLATION TOOLS

| | | |
|---|--|--|
| <div>Screwdriver</div> <div></div> <div>not included</div> | <div>DIN-rail EN60715</div> <div></div> <div>not included</div> | <div>Connectors</div> <div></div> <div>supplied with the driver</div> |
| see STEP 1 | | see STEP 2 |

PROGRAMMING TOOLS - not included


| | | | | | | | |
|--|---|---|---|----|--|---|---|
| PC software | mobile App | Bluetooth connection KIT | | OR | | USB connection KIT | |
| | | Adapter | Cable | | | Cable | Isolator |
|  |  |  |  | | |  |  |
| E-SW-SETUP | Atos CONNECT | E-A-BTH | E-C-BTH | | | E-C-SB-USB/M12 | E-A-SB-USB/OPT |

NOTE: Atos CONNECT supports Atos digital valve drivers equipped with E-A-BTH or with built-in Bluetooth, see STEP 4


PC SOFTWARE

| | | | | | |
|---|----------|--|------------------|----------------------|---------------|
| E-SW-SETUP | supports | NP (USB) | IL (IO-Link) | PS (Serial) | IR (Infrared) |
| | | BC (CANopen) | BP (PROFIBUS DP) | EH (EtherCAT) | |
| | | EW (POWERLINK) | EI (EtherNet/IP) | EP (PROFINET RT/IRT) | |
| | supports | valves with SP, SF, SL alternated p/Q control | | | |
| REMARK Atos PC software is designed for Windows based operative systems - Windows 10 or later | | | | | |

PC SOFTWARE DOWNLOAD



WELCOME
enter your email
Password
Forgot your password?
Register



Download PC software at www.atos.com
accessing to "MyAtos -> Download area electronics"

Free registration by filling the form at www.atos.com/en-it/login

E-SW-SETUP is free and available in Download area

RELATED DOCUMENTATION - www.atos.com

| | |
|--|---|
| FS900 Operating and maintenance information - tech. table | STARTUP BLUETOOTH Bluetooth adapter startup guide |
| F*** Proportional valves with one or two LVDT - tech. table | E-MAN-BM-LES TES/LES - driver operating manual |
| P005 Mounting surface - tech. table | E-MAN-BM-LES-S TES/LES - driver with S option operating manual |
| GS240 E-BM-TES/LES drivers - tech. table | E-MAN-S-BC CANopen protocol programming manual |
| GS500 Programming tools - tech. table | E-MAN-S-BP PROFIBUS DP protocol programming manual |
| GS510 Fieldbus - tech. table | E-MAN-S-EH EtherCAT protocol programming manual |
| K800 Electric and electronic connectors - tech. table | E-MAN-S-EW POWERLINK protocol programming manual |
| | E-MAN-S-EI EtherNet/IP protocol programming manual |
| | E-MAN-S-EP PROFINET protocol programming manual |

ATTENTION !

The purpose of this quickstart guide is show a logical sequence of basic operations. This guide does not cover all details or variants of Atos valves. All operations described in this document should be performed only by qualified personnel. Operations and images could be subject to change without notice. For further information please refer to related documentation.


CONTACT US

Atos spa - Italy - 21018 Sesto Calende


www.atos.com

support@atos.com


PRODUCTS OVERVIEW

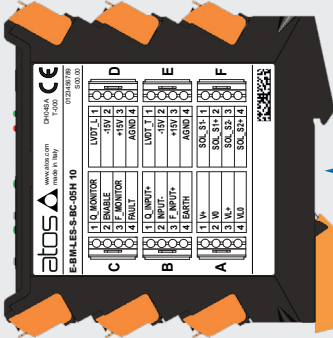


STEP 1

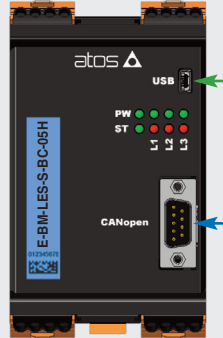


STEP 3



STEP 2.2

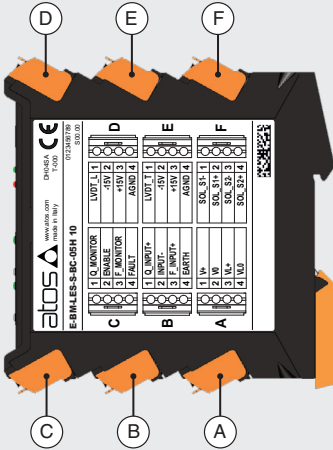

STEP 2.1

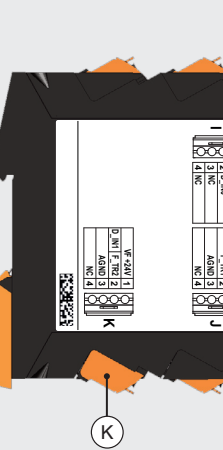


STEP 2.1


| INSTALLATION | | PROGRAMMING | |
|--------------|------------|-------------|------------|
| STEP 1 | STEP 2 | STEP 3 | STEP 4 |
| MECHANICAL | ELECTRICAL | PC SOFTWARE | MOBILE APP |

STEP 1 MECHANICAL


To lock the driver from the DIN rail:
1. place the attach located on the driver bottom on the DIN rail
2. press the driver against the DIN rail until the locking slide clicks

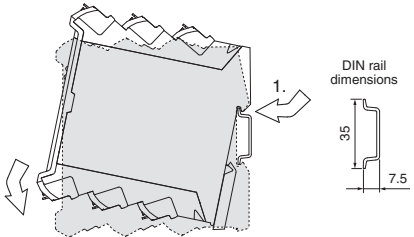


To unlock the driver from the DIN rail:
1. pull down the locking slide with a screwdriver
2. rotate up the driver

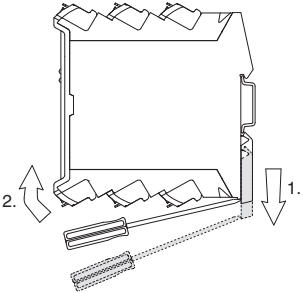


To extract the connectors:
1. push lever
2. pull connector

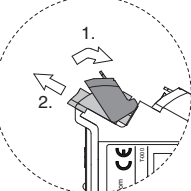

To insert the connectors:
1. push the connector in its slot

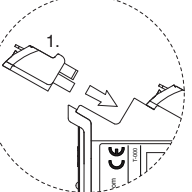

To wire cables in the connectors:
1. insert the cable termination
2. turn screw with a screwdriver

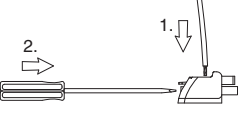

NOTE:
max conductor size 2,5 mm²
tightening torque 0,4 ÷ 0,6 Nm

NOTE: all connectors are supplied with a mechanical coding. This feature ensures a unique insertion of each connector in the own slot (e.g. connector A can not be inserted into connector slot of B,C,D,E,F,J,K,I)

STEP 2 ELECTRICAL

This section considers the different drivers executions, illustrating the multiple variants of the available electrical connections. The electrical connections have to be wired according to the selected driver code

WARNING: remove power supply before any electrical or wiring operations

WARNING: a safety fuse is required in series to driver power supply - 2,5 A time lag fuse

2.1 CONNECTORS

Recommended LiVCY shielded cables: 0,5 mm² max 50 m - for logic - 1,5 mm² max 50 m - for power supply and solenoids

E-BM-TES/LES-N
drivers without alternated p/Q control **SN**

| Power supply | |
|--------------|--------------------------|
| 1 | V+ (power supply 24Voc) |
| 2 | V0 (power supply 0Voc) |
| 3 | VL+ (power supply 24Voc) |
| 4 | VL0 (power supply 0Voc) |

| Flow reference signal | |
|-----------------------|--|
| 1 | Q_INPUT+ (±10Voc / 4 ÷ 20mA) |
| 2 | INPUT- (negative reference for Q_INPUT+) |
| 3 | NC |
| 4 | EARTH |

| Flow monitor, enable and fault signals | |
|--|-------------------------------|
| 1 | Q_MONITOR (±10Voc / 4 ÷ 20mA) |
| 2 | ENABLE (input 24Voc) |
| 3 | NC |
| 4 | FAULT (output 24Voc) |

| LVDT position transducer - main stage valve | |
|---|---|
| 1 | LVDT_L (main stage valve - transducer input signal) |
| 2 | -15V (power supply -15Voc) |
| 3 | +15V (power supply +15Voc) |
| 4 | AGND (ground for transducer power and monitor) |

| LVDT position transducer - direct or pilot valve | |
|--|--|
| 1 | LVDT_T (direct or pilot valve - transducer input signal) |
| 2 | -15V (power supply -15Voc) |
| 3 | +15V (power supply +15Voc) |
| 4 | AGND (ground for transducer power and monitor) |

| Solenoids | |
|-----------|---|
| 1 | SOL_S1- (negative current to solenoid S1) |
| 2 | SOL_S1+ (positive current to solenoid S1) |
| 3 | SOL_S2- (negative current to solenoid S2) |
| 4 | SOL_S2+ (positive current to solenoid S2) |

E-BM-TES/LES-S
drivers with alternated p/Q control
(**SP, SF, SL** software selectable)

| Power supply | |
|--------------|--------------------------|
| 1 | V+ (power supply 24Voc) |
| 2 | V0 (power supply 0Voc) |
| 3 | VL+ (power supply 24Voc) |
| 4 | VL0 (power supply 0Voc) |

| Flow and pressure/force reference signals | |
|---|---|
| 1 | Q_INPUT+ (±10Voc / 4 ÷ 20mA) |
| 2 | INPUT- (negative reference for Q_INPUT+ and F_INPUT+) |
| 3 | F_INPUT+ (±10Voc / 4 ÷ 20mA) |
| 4 | EARTH |

| Flow and pressure/force monitor, enable and fault signals | |
|---|-------------------------------|
| 1 | Q_MONITOR (±10Voc / 4 ÷ 20mA) |
| 2 | ENABLE (input 24Voc) |
| 3 | F_MONITOR (±10Voc / 4 ÷ 20mA) |
| 4 | FAULT (output 24Voc) |

| LVDT position transducer - main stage valve | |
|---|---|
| 1 | LVDT_L (main stage valve - transducer input signal) |
| 2 | -15V (power supply -15Voc) |
| 3 | +15V (power supply +15Voc) |
| 4 | AGND (ground for transducer power and monitor) |

| LVDT position transducer - direct or pilot valve | |
|--|--|
| 1 | LVDT_T (direct or pilot valve - transducer input signal) |
| 2 | -15V (power supply -15Voc) |
| 3 | +15V (power supply +15Voc) |
| 4 | AGND (ground for transducer power and monitor) |

| Solenoids | |
|-----------|---|
| 1 | SOL_S1- (negative current to solenoid S1) |
| 2 | SOL_S1+ (positive current to solenoid S1) |
| 3 | SOL_S2- (negative current to solenoid S2) |
| 4 | SOL_S2+ (positive current to solenoid S2) |

| Digital input | |
|---------------|-------------------------|
| 1 | NC |
| 2 | D_IN0 (input 24Voc) (5) |
| 3 | NC |
| 4 | NC |

| Pressure/force transducer signal | |
|----------------------------------|------------------------------|
| 1 | VF +24V (power supply 24Voc) |
| 2 | F_TR1 (±10Voc / 4 ÷ 20mA) |
| 3 | AGND |
| 4 | NC |

| Pressure transducer signal and digital input | |
|--|-------------------------------|
| 1 | VF +24V (power supply 24Voc) |
| 2 | F_TR2 (±10Voc / 4 ÷ 20mA) (3) |
| 3 | D_IN1 (input 24Voc) (4) (5) |
| 4 | AGND |
| 5 | NC |

(1) D connector is available only for TES-N versions 01HP / 05HP and LES-*

(2) E connector is available only for TES-* versions 01H / 05H and LES-*

(3) Only for SF control


(4) Only for SP or SL control

(5) NP execution: multiple pressure/force PID selection - Fieldbus execution: general purpose digital input

2.2 FIELDBUS CONNECTORS - only for BC, BP, EH, EW, EI, EP


Select fieldbus connectors according to driver code and proceed with wirings operations

BC




| BC (DB9 - 9 pin) | |
|-------------------|-------------------------------|
| 2 | CAN_L Bus line (low) |
| 3 | CAN_GND Signal zero data line |
| 5 | CAN_SHLD Shield |
| 7 | CAN_H Bus line (high) |

BP



| BP (DB9 - 9 pin) | |
|--------------------|--|
| 1 | SHIELD |
| 3 | LINE-B Bus line (low) |
| 5 | DGND Data line - termination signal zero |
| 6 | +5V Termination supply signal |
| 8 | LINE-A Bus line (high) |


EH , EW , EI , EP

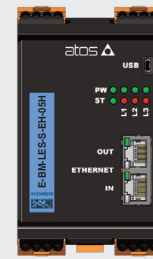


| EH - EW - EI - EP (RJ45 - 8 pin) | |
|------------------------------------|-----------------|
| 1 | TX+ Transmitter |
| 2 | RX- Receiver |
| 3 | TX- Transmitter |
| 6 | RX- Receiver |

NOTE: to interface BP execution with Siemens 6ES7972-0BA12-0XA connector, it is mandatory to use also one of the following adapters to avoid interference with the USB connector:
DG909MF1 - the connector will be oriented upwards
DG909MF3 - the connector will be oriented downwards


REFERENCE INPUT - VOLTAGE

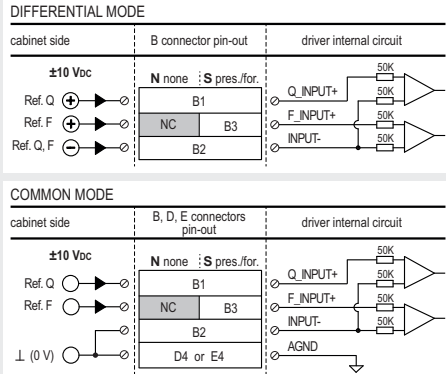


MONITOR OUTPUT - VOLTAGE

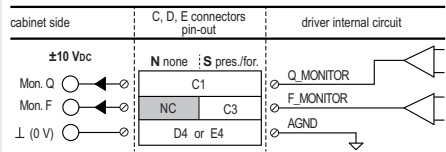




PRESSURE/FORCE TRANSDUCERS - only for S
SP or SL CONTROL

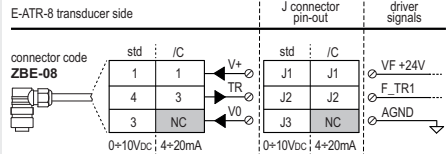

SF CONTROL

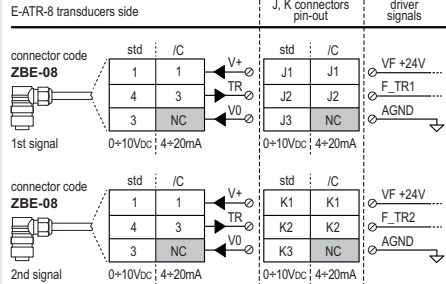


SOLENOIDS

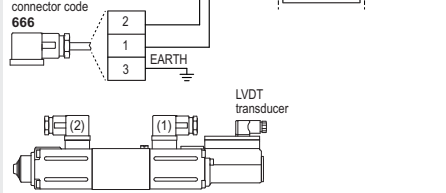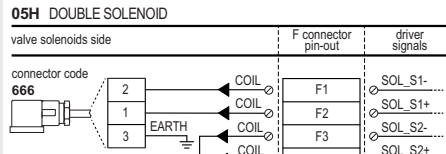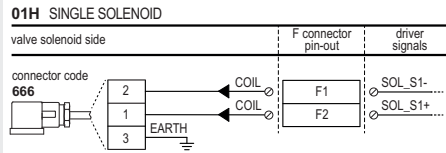


WARNING: for double solenoid valve pay attention to do not invert the connectors (1) and (2). If they are not inserted as shown in the example, the valve will not work properly and could cause eventual damages to the system.


REFERENCE INPUT - CURRENT

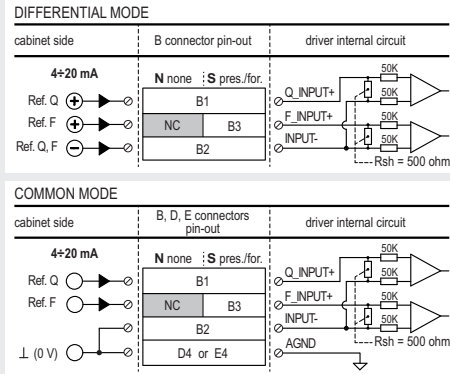


MONITOR OUTPUT - CURRENT

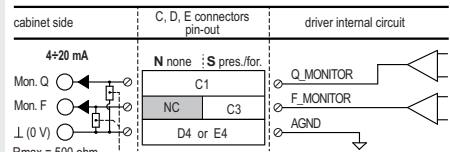


LVDt TRANSDUCERS

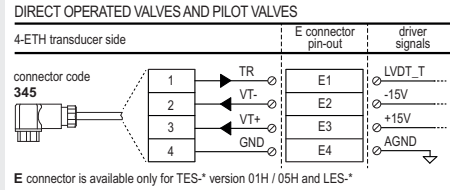

MAIN STAGE OF PILOT OPERATED VALVES (EXCEPT LIQZP-125)

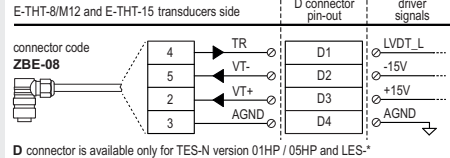

MAIN STAGE OF LIQZP-125

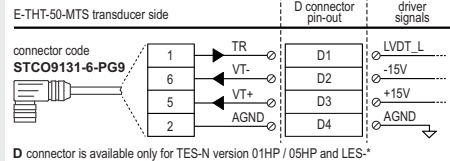

STEP 3 PC SOFTWARE


REMARK off-board drivers are factory preset with default parameters, only few programming operations are mandatory for:

- **BC, BP, EH, EW, EI, EP** setup the network parameters and the source of reference signals
- **SP, SF, SL** setup the feedback's scale for remote transducers and the pressure/force PID parameters

Driver programming can be performed through E-SW-SETUP software or via fieldbus (not for NP)

3.1 CONNECTION


- 1 In order to access valve parameterization:
 - Install E-SW-SETUP software on PC
 - Complete the electrical installation and power on the driver with 24Vdc
- 2 Connect driver to the PC as shown below via Bluetooth (cable and adapter) or USB (cable and isolator adapter)

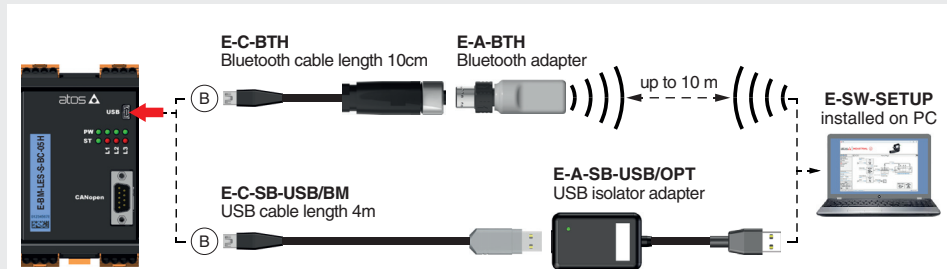

WARNING: drivers USB port is not isolated!
The use of USB isolator adapter is highly recommended for PC protection (see GS500)


- 3 Launch the PC software using E-SW-SETUP icon:
 - **PC software does NOT detect valid connection** communication is not established, please follow wizard procedure
 - **PC software detects valid connection** communication automatically established - valve is **ON-LINE** see

- 4 In **ON-LINE** - Wizard press button:
 - a : **WIRELESS CONNECTION** Wizard procedure for connection via Bluetooth
 - b : **CABLE CONNECTION** Wizard procedure for connection via USB cable

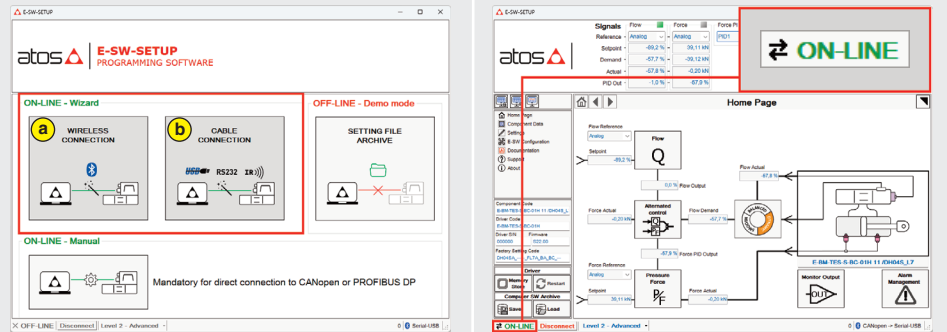

3.2 FIELDBUS - Network Management - only for BC, BP, EH, EW, EI, EP

- Node, Station Alias, IP Address, Baudrate, etc... can be set through:
- 1 Machine central unit (master) - please refer to E-MAN-S-* fieldbus protocol programming manual
 - 2 E-SW-SETUP software
 - browse to **Network Management - Configuration** to change below default settings:

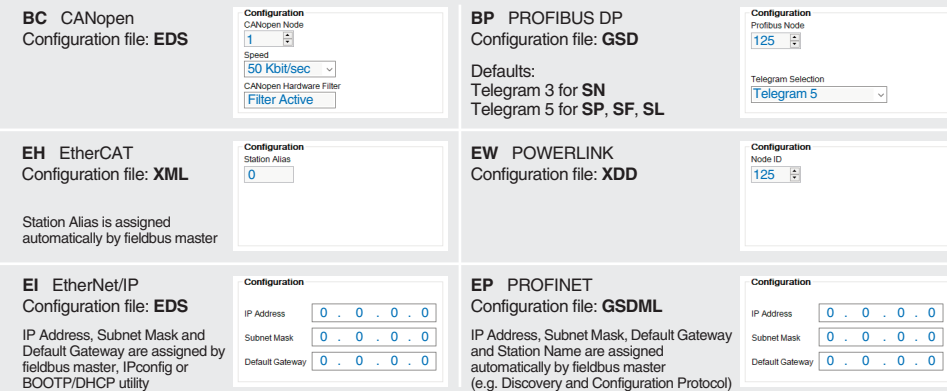


- press **Memory Store** button and press **Save User Set** button to save new setting into the driver (see 3.5)
 - network configuration settings will be applied at next driver power on or pressing the **Restart** button
- NOTE:** configuration files are available in MyAtos area - www.atos.com

3.3 REFERENCES - only for BC, BP, EH, EW, EI, EP

The source of reference signals for drivers with fieldbus:

- is preset as **Analog** by factory default
- can be managed through machine control unit by setting the source from **Analog** to **Fieldbus**

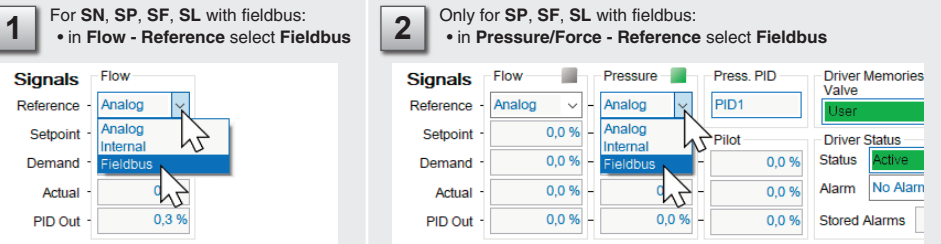

3.4 p/Q SETUP - only for SP, SF, SL

The scaling procedure of the remote transducers feedbacks and pressure/force PID tuning are mandatory!
Please refer to E-MAN-BM-LES-S operating manual.

WARNING: the system may be damaged and/or perform uncontrolled movements, due to vibrations and/or undesired transitions between controls **p** and **Q** or not executing at all the pressure/force limitation, if the operations listed in this paragraph are not performed.

3.5 STORE

Parameters modifications will be stored into driver permanent memory:

- press **Memory Store** button to access **Driver - Memory Save** window
- press **Save User Set** button to store **Valve Parameters**

WARNING: during valve parameters storing operations, the driver automatically shuts down the solenoid power supply for a short time. Do not perform any storing commands while the system is working.

3.6 BACK UP

Parameter modifications will be saved into PC memory:

- press **Save** button to access **Computer SW Archive - Setting Files** page, **Setting File Name** pop-up appears
- input a valid name into **Description** field and press **Ok** button

STEP 4 MOBILE APP

ATOS CONNECT for smartphones and tablets is a free downloadable app which allows quick access to valve main functional parameters and configuration via Bluetooth, thus avoiding physical cable connection and significantly reducing commissioning times.

ATOS CONNECT app requirements:

- iOS 14 / Android 9
- Bluetooth Low Energy (BLE), version 4.2 or higher
- Atos digital valves/drivers equipped with E-A-BTH Bluetooth adapter or with built-in Bluetooth




HINT ! - Wizard objects dictionary - only for BC, BP, EH, EW, EI, EP

Press **CTRL + H** on the PC keyboard to open the context help form

Move arrow on parameter (e.g. **Unit**) to display the objects dictionary information to access the parameter via fieldbus

If present **List**, press **→** to display values accepted by the parameter

NOTE: alternatively right click on any parameter

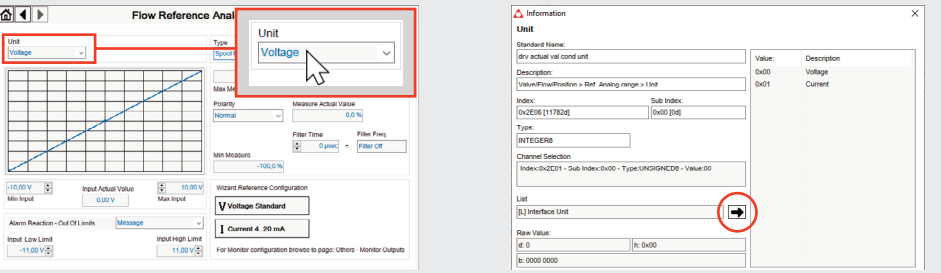

TROUBLESHOOTING

Valve vibration or noise

- presence of air in the solenoid; perform air bleeding procedure – see tech. table of the connected valve

The valve does not follow the reference signal

- driver is powered off, verify presence of 24 Vdc power supply and the coil(s) connection
- driver is disabled, verify presence of 24 Vdc on enable pin
- flow/pressure values exceeding the valve's performance limits, verify that hydraulic operating conditions are in compliance with the valve's characteristics
- spool sticking, contact Atos service center
- missing piloting pressure, verify that hydraulic pressure in X (for DPZO/E and LIQZP) or P line (DPZO) is compliant with the required value
- wrong pilot/drain configuration - check if the pilot/drain configuration of the valve corresponds to the effective system layout

PC software parameters modifications are lost when driver is switched off

• parameter store operation was not performed, check store procedure – see STEP 3, section 3.5

PC software parameters modifications have no effect on the valve

• driver is OFF LINE, check connection procedure – see STEP 3, section 3.1

After the modifications of PC software parameters the valve does not work properly

- restore valve factory parameters using 'Load Factory Set' button, located in 'Driver - Memory Save' window:
 - during restore, the current to the solenoid(s) will be temporarily switched to off!
 - factory parameters will be applied at next driver restart or after power off-on sequence!
 - perform the bias and scale configurations again!