


# Proportional relief valves type 11\*106 RZMO-A\* with Pmax 500 bar

direct operated, without integral pressure transducer, ISO 4401 size 06

# Available only on request

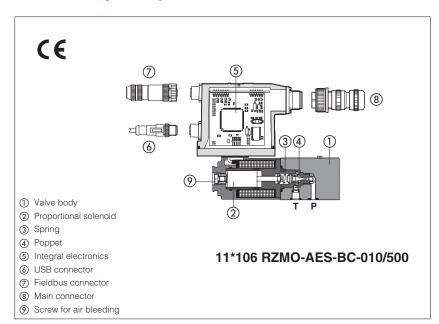

#### 11\*106 RZMO-A\*

Poppet type direct operated proportional relief valves for pressure open loop controls with special construction for max regulated pressure 500 bar.


#### Executions:

- A without integral driver, to be coupled with separated driver, see section 2
- AEB with basic integral digital electronic driver, analog reference signals and USB port for software functional parameters setting
- AES with full integral digital electronic driver and fieldbus interface for functional parameters setting, reference signals and real-time diagnostics

The integral digital electronic driver performs the valve's hydraulic regulation according to the reference signal and assures valve-to-valve interchangeability thanks to the factory presetting

Size: **06** - ISO 4401 Max flow: **3 l/min** Max pressure: **500 bar** 

# 1 MODEL CODE

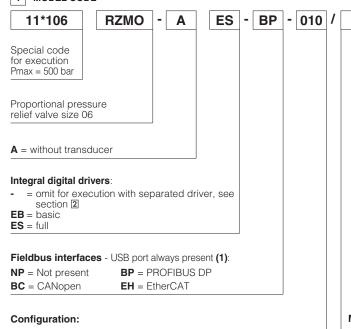

Seals material, see sect. 6: - = NBR PE = FKM

Coil voltage only for -A - see section 8:

= standard coil for 24Vpc Atos drivers

**6** = optional coil for  $12V_{DC}$  Atos drivers

18 = optional coil for low current drivers

# **Electronics options**

only for AEB and AES - see section  $\ensuremath{\mathfrak{9}}$  :

I = current reference input  $4 \div 20 \text{ mA}$ 

(omit for standard voltage reference input 0 ÷ 10 V)

**Q** = enable signal

**Z** = double power supply, enable, fault and monitor signals - 12 pin connector

**010** = regulation on port P, discharge in T

# Max regulated pressure:

**500** = 500 bar

500


(1) Omit for A execution; AEB available only in version NP; AES available only in version BC, BP, EH

# 2 ELECTRONIC DRIVERS

Valve model				1	A			AEB	AES
Drivers model	E-MI-A	E-MI-AC-01F E-MI-AS-IR		E-BM-	E-BM-AS-PS E-BM-AES		E-RI-AEB	E-RI-AES	
Туре	Ana	Analog Digital							
Voltage supply (V <sub>DC</sub> )	12	24	12	24	12	24	24	24	
Valve coil option	/6	std	/6	std	/6	std	std	std	
Format		g-in enoid		g-in enoid		DIN-ra	il panel	Integral to valve	
Data sheet	GC	)10	GC	)20	GC	030	GS050	GS	115

Note: for main and communication connector see sections [11], [12]

#### Hydraulic symbol

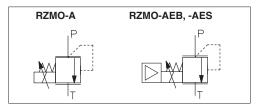

# 3 GENERAL NOTES

RZMO-A\* proportional valves are CE marked according to the applicable Directives (e.g. Immunity/Emission EMC Directive and Low Voltage Directive).

Installation, wirings and start-up procedures must be performed according to the general prescriptions shown in table F003 and in the installation notes supplied with relevant components.

# 4 FIELDBUS - only for AES

Fieldbus allows the direct communication of the proportional valve with machine control unit for digital reference signal, diagnostics and settings of functional parameters. Analog reference signal remain available on the main connector for quick commissioning and maintenance. For detailed information about fieldbus features and specification see tech table **GS510**.

# 5 MAIN CHARACTERISTICS - based on mineral oil ISO VG 46 at 50 °C

Assembly position / location	Any position					
Subplate surface finishing	Roughness index Ra 0,	4 - flatness ratio 0,01/100	(ISO 1101)			
MTTF valves according to EN ISO 13849	150 years, see technic	cal table P007				
Ambient temperature range	A: standard	= -20°C ÷ +70°C,				
Ambient temperature range	AEB, AES: standard	$= -20^{\circ}\text{C} \div +60^{\circ}\text{C},$				
Storage temperature range	A: standard	= -20°C ÷ +80°C,				
Storage temperature range	AEB, AES: standard	$= -20^{\circ}\text{C} \div +70^{\circ}\text{C},$				
Coil resistance R at 20°C	Standard = $3 \div 3.3 \Omega$	Option /6 = 2 ÷	2,2 Ω Option /18	$= 13 \div 13,4 \Omega$		
Max. solenoid current	Standard = 2,6 A Option /6 = 3,25 A Option /18 = 1,5 A					
Max. power	A = 30 Watt AEB, AES = 50 Watt					
Insulation class	H (180°) Due to the occuring surface temperatures of the solenoid coils, the European standards					
Insulation class	ISO 13732-1 and EN982 must be taken into account					
Protection degree to DIN EN60529	IP66/67 with mating co	onnectors				
Tropicalization (only AEB, AES)	Tropical coating on el	ectronics PCB				
Duty factor	Continuous rating (ED	)=100%)				
EMC, climate and mechanical load	See technical table G004					
Communication interface (only AEB, AES)	USB Atos ASCII coding	CANopen EN50325-4 + DS408	PROFIBUS DP EN50170-2/IEC61158	EtherCAT IEC 61158		
Communication physical layer (only AEB, AES)	not insulated USB 2.0 + USB OTG	optical insulated CAN ISO11898	optical insulated RS485	Fast Ethernet, insulated 100 Base TX		
			-			

Max regulated pressu	re [bar]	500
Min. regulated pressu	re [bar]	10
Max. pressure at port	P [bar]	500
Max. pressure at port	T [bar]	210
Max. flow	[l/min]	3
Response time 0-100% (depending on installa	Imel	≤70
Hysteresis	[% of the max pressure]	≤ 1,5
Linearity	[% of the max pressure]	≤3
Repeatability	[% of the max pressure]	≤2

 $\textbf{Notes:} \ \text{above performance data refer to valves coupled with Atos electronic drivers, see section } \textbf{2}$ 

(1) Average response time value; the pressure variation in consequence of a modification of the reference input signal to the valve is affected by the stiffness of the hydraulic circuit: greater is the stiffness of the circuit, faster is the dynamic response.

# 6 SEALS AND HYDRAULIC FLUID - for other fluids not included in below table, consult our technical office

Seals, recommended fluid	temperature	NBR seals (standard) = -20°C $\div$ +60°C, with HFC hydraulic fluids = -20°C $\div$ +50°C FKM seals (/PE option) = -20°C $\div$ +80°C				
Recommended viscosity		15÷100 mm²/s - max allowed range 2.8 ÷ 500 mm²/s				
Max fluid	normal operation	ISO4406 class 18/16/13 NAS1	638 class 7	see also filter section at		
contamination level	longer life	ISO4406 class 16/14/11 NAS1	www.atos.com or KTF catalog			
Hydraulic fluid		Suitable seals type	Classification	Ref. Standard		
Mineral oils		NBR, FKM	HL, HLP, HLPD, HVLP, HVLPD	DIN 51524		
Flame resistant without water		FKM HFDU, HFDR		- ISO 12922		
Flame resistant with water		NBR	HFC	150 12922		


# 7.1 Regulation diagrams

with flow rate Q = 1 I/min

#### **1** = 11\*106 RZMO-\*-010/500

#### Note


The presence of counter pressure at port T can affect the effective pressure regulation.

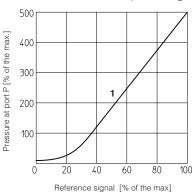

#### 7.2 Pressure/flow diagrams


with reference signal set at Q = 1 l/min

2 = 11\*106 RZMO-\*-010/500

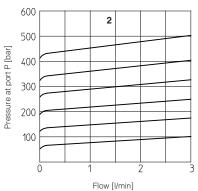

# 7.3 Min. pressure/flow diagrams with zero reference signal

**3** = 11\*106 RZMO-\*-010/500

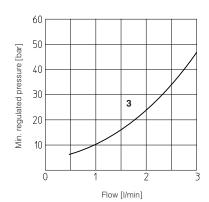

### 8 OPTIONS for -A

#### 8.1 Coil voltage

Option /6 optional coil to be used with Atos drivers with power supply 12 Vpc
Option /18 optional coil to be used with electronic drivers not supplied by Atos

# 9 ELECTRONIC OPTIONS - for AEB and AES

Standard driver execution provides on the 7 pin main connector:

Power supply

- 24Vpc must be appropriately stabilized or rectified and filtered; a 2,5 A fuse time lag is required in series to each driver power supply. Apply at least a 10000  $\mu$ F/40 V capacitance to single phase rectifiers or a 4700  $\mu$ F/40 V capacitance to three phase rectifiers

Reference input signal - analog differential input with 0÷+10 Vpc nominal range (pin D,E), proportional to desired valve pressure regulation

Monitor output signal - analog output signal proportional to the actual valve's coil current (1V monitor = 1A coil current)

**Note:** a minimum booting time of 500 ms has be considered from the driver energizing with the 24 Vpc power supply before the valve has been ready to operate. During this time the current to the valve coils is switched to zero.

#### 9.1 Option /I

It provides 4 ÷ 20 mA current reference signal, instead of the standard 0÷+10 Vpc.

Input signal can be reconfigured via software selecting between voltage and current, within a maximum range of ±10 V or ±20 mA.

It is normally used in case of long distance between the machine control unit and the valve or where the reference signal can be affected by electrical noise; the valve functioning is disabled in case of reference signal cable breakage

#### 9.2 Option /Q

To enable the driver, supply 24 Vpc on pin C referred to pin B: Enable input signal allows to enable/disable the current supply to the solenoid, without removing the electrical power supply to the driver; it is used to maintain active the communication and the other driver functions when the valve has to be disabled. This condition does not comply with European Norms EN13849-1 (ex EN954-1).

#### 9.3 Option /Z

It provides, on the 12 pin main connector, the following additional features:

#### Enable Input Signal

To enable the driver, supply 24 Vpc on pin 3 referred to pin 2: Enable input signal allows to enable/disable the current supply to the solenoid, without removing the electrical power supply to the driver; it is used to maintain active the communication and the other driver functions when the valve has to be disabled. This condition does not comply with European Norms EN13849-1 (ex EN954-1).

#### Fault Output Signal

Fault output signal indicates fault conditions of the driver (solenoid short circuits/not connected, reference signal cable broken for 4÷20mA input, etc.). Fault presence corresponds to 0 VDC, normal working corresponds to 24 Vbc (pin 11 referred to pin 2): Fault status is not affected by the Enable input signal

#### Power supply for driver's logics and communication

Separate power supply (pin 9,10) allow to cut solenoid power supply (pin 1,2) while maintaining active diagnostics, serial and fieldbus communication. A safety fuse is required in series to each driver power supply: 500 mA fast fuse.

#### 9.4 Possible combined options: /IQ, /IZ

# 10 ELECTRONIC CONNECTIONS

# 10.1 Main connector signals - 7 pin - standard and /Q option - RZMO-AEB and RZMO-AES (A1)

PIN	Standard	/Q	TECHNICAL SPECIFICATIONS	NOTES
Α	V+		Power supply 24 Vbc Rectified and filtered: VRMs = 20 ÷ 32 VMAX (ripple max 10 % VPP)	Input - power supply
В	V0		Power supply 0 Vpc	Gnd - power supply
С	AGND		Analog ground	Gnd - analog signal
		ENABLE	Enable (24 Vpc) or disable (0 Vpc) the driver, referred to V0	Input - on/off signal
D	D INPUT+		Pressure reference input signal: ±10 Vpc / ±20 mA maximum range Defaults are 0 ÷ 10 Vpc for standard and 4 ÷ 20 mA for /I option	Input - analog signal Software selectable
Е	INPUT-		Negative reference input signal for P_INPUT+	Input - analog signal
F	MONITOR referred to: AGND   V0		Pressure monitor output signal: ±5 Vpc maximum range Default is 0 ÷ 5 Vpc (1V = 1A)	Output - analog signal Software selectable
G	EARTH		Internally connected to driver housing	

# 10.2 Main connector signals - 12 pin - /Z option - RZMO-AEB and RZMO-AES (A2)

PIN	/Z	TECHNICAL SPECIFICATIONS	NOTES		
1	V+	Power supply 24 Vpc Rectified and filtered: VRMs = 20 ÷ 32 VMAX (ripple max 10 % Vpp)	Input - power supply		
2	V0	Power supply 0 Vpc	Gnd - power supply		
3	ENABLE	Enable (24 Vpc) or disable (0 Vpc) the driver, referred to V0	Input - on/off signal		
4	INPUT+	Pressure reference input signal: ±10 Vpc / ±20 mA maximum range  Defaults are 0 ÷ 10 Vpc for standard and 4 ÷ 20 mA for /I option			
5	INPUT-	Negative reference input signal for P_INPUT+	Input - analog signal		
6	MONITOR	Pressure monitor output signal: ±5 Vpc maximum range Defaults is 0 ÷ 5 Vpc (1V = 1A)	Output - analog signal Software selectable		
7	NC	Do not connect			
8	NC	Do not connect			
9	VL+	Power supply 24 Vpc for driver's logic and communication	Input - power supply		
10	VL0	Power supply 0 Vpc for driver's logic and communication	Gnd - power supply		
11	FAULT	Fault (0 Vpc) or normal working (24 Vpc), referred to V0	Output - on/off signal		
PE	EARTH	Internally connected to driver housing			

# 10.3 Communication connectors - RZMO-AEB B and RZMO-AES B C

В	USB connector - M12 - 5 pin always present				
PIN	SIGNAL	TECHNICAL SPECIFICATION (1)			
1	+5V_USB	Power supply			
2	ID	Identification			
3	GND_USB	Signal zero data line			
4	D-	Data line -			
5	D+	Data line +			

©2)	©2 BP fieldbus execution, connector - M12 - 5 pin (2)					
PIN	SIGNAL TECHNICAL SPECIFICATION (1)					
1	+5V	Termination supply signal				
2	LINE-A	Bus line (high)				
3	DGND	Data line and termination signal zero				
4	LINE-B	Bus line (low)				
5	SHIELD					


©1 BC fieldbus execution, connector - M12 - 5 pin (2)					
PIN	SIGNAL TECHNICAL SPECIFICATION (1)				
1	CAN_SHLD	Shield			
2	NC	do not connect			
3	CAN_GND	Signal zero data line			
4	CAN_H	Bus line (high)			
5	CAN_L	Bus line (low)			

©3 ©4 EH fieldbus execution, connector - M12 - 4 pin (2)				
PIN SIGNAL TECHNICAL SPECIFICATION (1)				
1	TX+	Transmitter		
2	RX+	Receiver		
3	TX-	Transmitter		
4	RX-	Receiver		
Housing	SHIELD			


Notes: (1) shield connection on connector's housing is recommended (2) only for AES execution

# 10.4 Solenoid connection - only for RZMO-A

PIN	SIGNAL	TECHNICAL SPECIFICATION	Connector code 666
1	COIL	Power supply	253
2	COIL	Power supply	
3	GND	Ground	

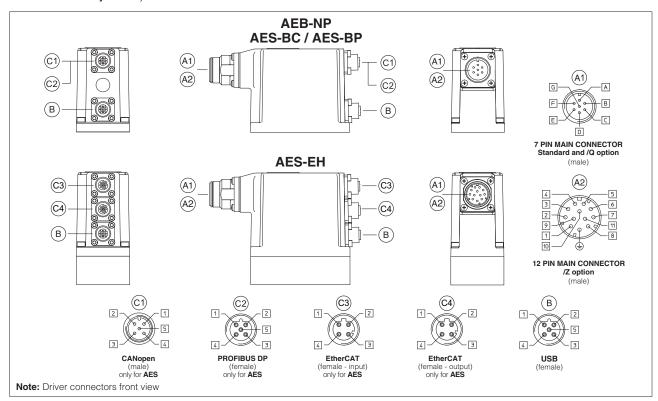

# 11 CONNECTORS

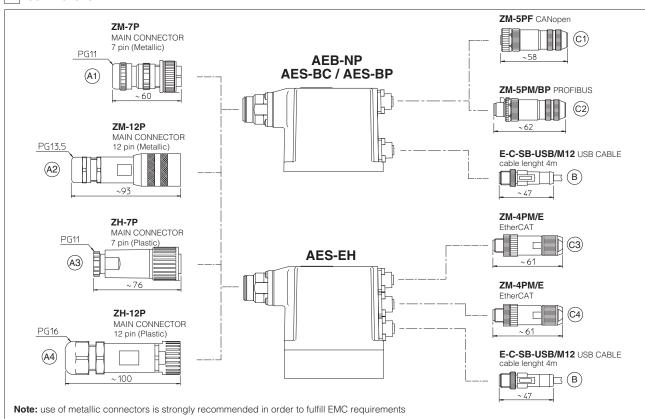

#### 12 MODEL CODES OF MAIN CONNECTORS AND COMMUNICATION CONNECTORS - to be ordered separately

VALVE VERSION	A (1) Power supply	AEB AES	AEB/Z AES/Z	BC - CANopen	BP - PROFIBUS DP	EH - EtherCAT
CONNECTOR CODE	666	ZM-7P (A1) ZH-7P (A3)	ZM-12P (A2) ZH-12P (A4)	ZM-5PF ©1)	ZM-5PM/BP ©2	ZM-4PM/E ©3 ZM-4PM/E ©4
PROTECTION DEGREE	IP67	Z11-71 (A3)	Z11-121 (A4)	IP67		2101-41 101/L
DATA SHEET	K500			GS115, K500		

only for AES

#### 13 PROGRAMMING TOOLS - see tech table GS500

Valve's functional parameters and configurations, can be easily set and optimized using Atos E-SW programming software connected via USB port to the digital driver. For fieldbus versions, the software permits valve's parameterization through USB port also if the driver is connected to the central machine unit via fieldbus.

The software is available in different versions according to the driver's options:

E-SW-BASIC support: NP (USB) PS (Serial) IR (Infrared) E-SW-FIELDBUS support: BC (CANopen) BP (PROFIBUS DP) EH (EtherCAT)


EW (POWERLINK) EI (EtherNet/IP)

E-SW-\*/PQ valves with SP, SF, SL alternated control (e.g. E-SW-BASIC/PQ) support:


# WARNING: drivers USB port is not isolated!

The use of isolator adapter is highly recommended for PC protection (see table **GS500**)

#### **USB** connection

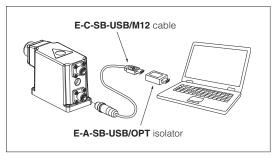

### 14 INSTALLATION DIMENSIONS [mm]

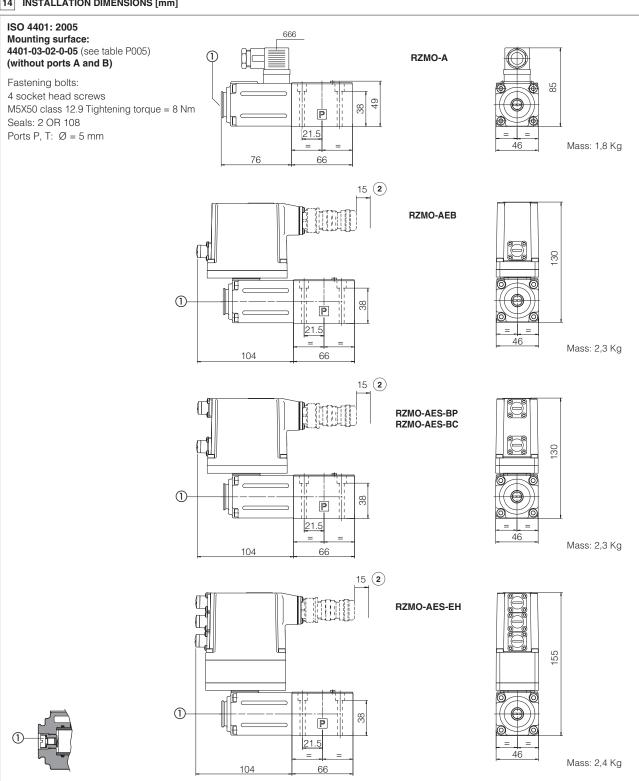

① = Screw for air bleeding: at the first valve commissioning the air eventually trapped inside the solenoid must be bled-off through the screw ①

2 = Space to remove the 7 or 12 pin main connector. For main and communication connectors see section 11, 12

02/19