

PROPORTIONAL AND SERVOPROPORTIONAL CARTRIDGES

Valve model:
LIQZP-LES 2 or 3 way

Driver models:
E-RI-LES-N for valves without alternated p/Q control **SN**
E-RI-LES-S for valves with alternated p/Q control **SP, SL**

IDENTIFICATION

Valve identification plates and label

Cartridge name plate : **M**

Pilot valve name plate : **N**

Driver label : **L**

1 : cartridge code

2 : cartridge valve matrix code

3 : cartridge hydraulic symbol

4 : pilot valve code

5 : pilot valve matrix code








6 : pilot hydraulic symbol

7 : driver code



8 : driver serial number

9 : factory firmware version

INSTALLATION TOOLS ACCORDING TO VALVE MODEL- not included

Fastening bolts	Wrenches	Main connectors		Fieldbus connectors		Transducers cables
 supplied with the valve socket head screws see STEP 1 and STEP 3	 for fastening bolts and air bleeding	SN 	SN,SP,SL 	BC,BP 	EH,EW,EI,EP 	SP,SL 
see STEP 1 and STEP 3		see STEP 2.1		see STEP 2.2		see STEP 2.3

PROGRAMMING TOOLS - not included

PC software	mobile App	Bluetooth	OR	USB connection KIT	
		Adapter	Cable	Isolator	
E-SW-SETUP	Atos CONNECT	E-A-BTH	E-C-SB-USB/M12	E-A-SB-USB/OPT	


NOTE: Atos CONNECT supports Atos digital valve drivers equipped with E-A-BTH or with built-in Bluetooth, see STEP 5

PC SOFTWARE


E-SW-SETUP	supports	NP (USB)	IL (IO-Link)	PS (Serial)	IR (Infrared)
		BC (CANopen)	BP (PROFIBUS DP)	EH (EtherCAT)	
		EW (POWERLINK)	EI (EtherNet/IP)	EP (PROFINET RT/IRT)	
	supports	valves with SP, SF, SL alternated p/Q control			

REMARK Atos PC software is designed for Windows based operative systems - Windows 10 or later

PC SOFTWARE DOWNLOAD



WELCOME
enter your email
Password
Forgot your password?
Register



Download area
electronics

Download PC software at www.atos.com accessing to "MyAtos -> Download area electronics"
Free registration by filling the form at www.atos.com/en-it/login
E-SW-SETUP is free and available in Download area

RELATED DOCUMENTATION - www.atos.com


FS900 Operating and maintenance information - tech. table	STARTUP BLUETOOTH Bluetooth adapter startup guide
FS500 Digital proportional valves with p/Q - tech. table	E-MAN-RI-LES TES/LES - driver operating manual
FS330 LIQZP 2-way cartridges, high performance - tech. table	E-MAN-RI-LES-S TES/LES - driver with S option operating manual
FS340 LIQZP 3-way cartridges - tech. table	E-MAN-S-BC CANopen protocol programming manual
P006 Mounting surfaces - tech. table	E-MAN-S-BP PROFIBUS DP protocol programming manual
GS500 Programming tools - tech. table	E-MAN-S-EH EtherCAT protocol programming manual
GS510 Fieldbus - tech. table	E-MAN-S-EW POWERLINK protocol programming manual
K800 Electric and electronic connectors - tech. table	E-MAN-S-EI EtherNet/IP protocol programming manual
	E-MAN-S-EP PROFINET protocol programming manual

ATTENTION !

The purpose of this quickstart guide is show a logical sequence of basic operations. This guide does not cover all details or variants of Atos valves. All operations described in this document should be performed only by qualified personnel. Operations and images could be subject to change without notice. For further information please refer to related documentation.

CONTACT US

PRODUCTS OVERVIEW

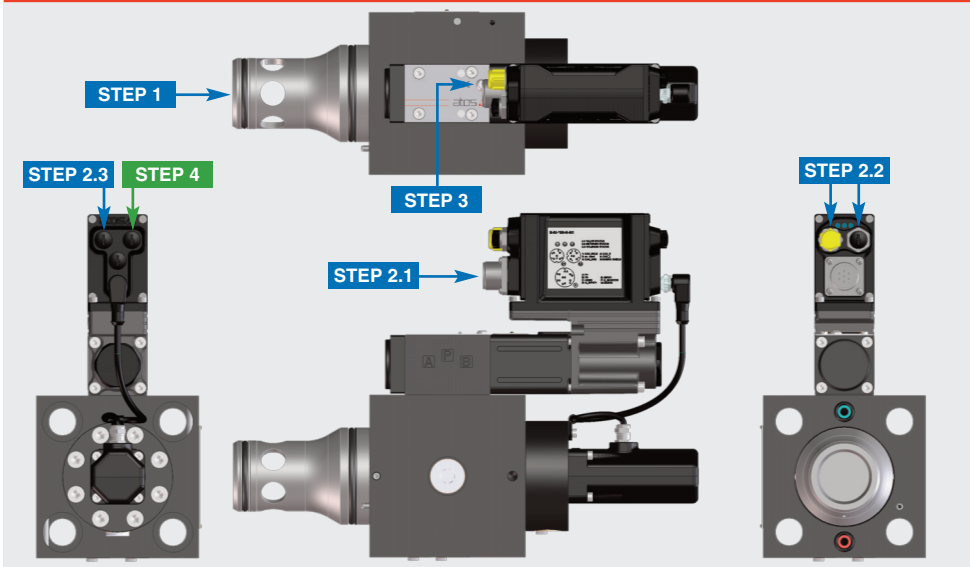


INSTALLATION			PROGRAMMING	
STEP 1	STEP 2	STEP 3	STEP 4	STEP 5
MECHANICAL	ELECTRICAL	HYDRAULICS	PC SOFTWARE	MOBILE APP

STEP 1 MECHANICAL


In case of first commissioning, before the valve installation the whole system must be correctly flushed to grant the required cleanliness level:

- remove the cartridge protection (do not remove connectors caps)
- check the presence and correct positioning of the seals on the mounting surface ports (**X - Y**) and on the cartridge (**K**)

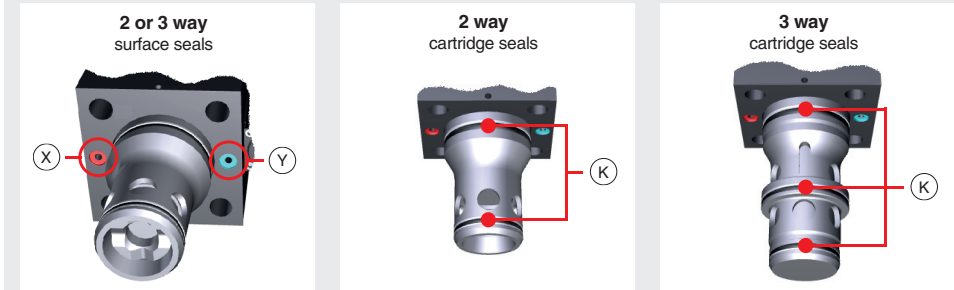

- verify that valve mounting surface and the manifold cavity are clean and free from damages or burrs
- verify the correct valve orientation according to the pattern of the relevant mounting interface
- lock the fastening bolts respecting tightening torque according to valve model

SIZE 16 to 63
mounting surface layout
ISO 7368

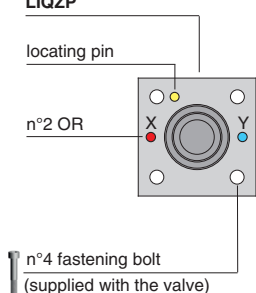


LIQZP

locating pin

n°2 OR

n°4 fastening bolt (supplied with the valve)

SIZE 80 to 125
mounting surface layout
ISO 7368

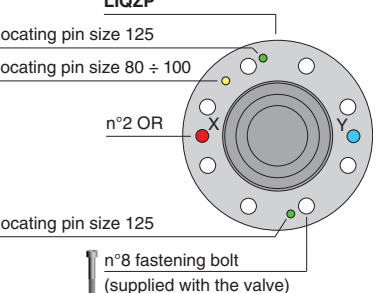

LIQZP

locating pin size 125

locating pin size 80 ÷ 100

n°2 OR

locating pin size 125

n°8 fastening bolt (supplied with the valve)

Notes: ISO 7368 cavity only for 2 way version


Type	Size	Fastening Bolt class: 12.9	Wrench (mm)	Tightening Torque (Nm)	O-Ring (X - Y)
LIQZP	16	n°4 M8 x 90	6	35	n°2 OR-108
	25	n°4 M12 x 100	10	125	n°2 OR-108
	32	n°4 M16 x 60	14	300	n°2 OR-2043
	40	n°4 M20 x 70	17	600	n°2 OR-2050
	50	n°4 M20 x 80	17	600	n°2 OR-3043
	63	n°4 M30 x 120	22	2100	n°2 OR-3050
	80	n°8 M24 x 80	19	1000	n°2 OR-4075
	100	n°8 M30 x 120	22	2100	n°2 OR-4087
	125	n°8 M36 x 260	27	3600	n°2 OR-37x5

STEP 2 ELECTRICAL

This section considers the different valves options, illustrating the multiple variants of the available electrical connections. The electrical connections have to be wired according to the selected valve code


2.1 MAIN CONNECTOR

1 Remove main connector cap **P1**

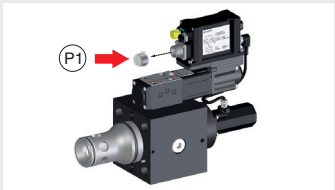

WARNING: remove power supply before any electrical or wiring operations


3 Connect the valve to the system

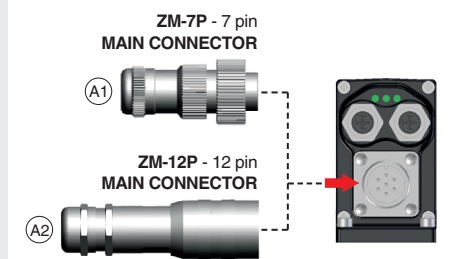


NOTE: the use of above metallic connectors is strongly recommended in order to fulfill EMC requirements

WARNING: a safety fuse is required in series to driver power supply - 2,5 A time lag fuse

2 Select main connector according to valve code and proceed with wirings operations

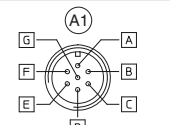

Recommended LIYCY shielded cables:
7 x 0,75 mm² max 20 m
7 x 1 mm² max 40 m

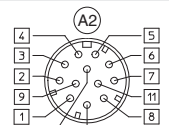

Recommended LIYCY shielded cable:
12 x 0,75 mm² max 20 m


SN standard		SN /Z option	
A	V+ (power supply 24Voc)	1	V+ (power supply 24Voc)
B	V0 (power supply 0Voc)	2	V0 (power supply 0Voc)
C	AGND (input 24Voc)	3	ENABLE (input 24Voc)
D	Q_INPUT+ (±10Voc / 4 ÷ 20mA)	4	Q_INPUT+ (±10Voc / 4 ÷ 20mA)
E	INPUT- (input 24Voc)	5	INPUT- (input 24Voc)
F	Q_MONITOR (±10Voc / 4 ÷ 20mA)	6	Q_MONITOR (±10Voc / 4 ÷ 20mA)
G	EARTH	7	NC
		8	NC
		9	VL+ (power supply 24Voc)
		10	VL0 (power supply 0Voc)
		11	FAULT (output 24Voc)
		PE	EARTH

SN /O option		SP,SL standard	
A	V+ (power supply 24Voc)	1	V+ (power supply 24Voc)
B	V0 (power supply 0Voc)	2	V0 (power supply 0Voc)
C	ENABLE (input 24Voc)	3	ENABLE (input 24Voc)
D	Q_INPUT+ (±10Voc / 4 ÷ 20mA)	4	Q_INPUT+ (±10Voc / 4 ÷ 20mA)
E	INPUT- (input 24Voc)	5	INPUT- (input 24Voc)
F	Q_MONITOR (±10Voc / 4 ÷ 20mA)	6	Q_MONITOR (±10Voc / 4 ÷ 20mA)
G	EARTH	7	F_INPUT+ (±10Voc / 4 ÷ 20mA)
		8	F_MONITOR (±10Voc / 4 ÷ 20mA)
		9	D_IN0 (multiple PID selection - NP)
		10	D_IN1 (multiple PID selection - NP)
		11	VL0 (power supply 0Voc - fieldbus)
		PE	EARTH


SN /F option		SP,SL standard	
A	V+ (power supply 24Voc)	1	V+ (power supply 24Voc)
B	V0 (power supply 0Voc)	2	V0 (power supply 0Voc)
C	AGND (input 24Voc)	3	ENABLE (input 24Voc)
D	Q_INPUT+ (±10Voc / 4 ÷ 20mA)	4	Q_INPUT+ (±10Voc / 4 ÷ 20mA)
E	INPUT- (input 24Voc)	5	INPUT- (input 24Voc)
F	FAULT (output 24Voc)	6	Q_MONITOR (±10Voc / 4 ÷ 20mA)
G	EARTH	7	F_INPUT+ (±10Voc / 4 ÷ 20mA)
		8	F_MONITOR (±10Voc / 4 ÷ 20mA)
		9	D_IN0 (multiple PID selection - NP)
		10	D_IN1 (multiple PID selection - NP)
		11	VL0 (power supply 0Voc - fieldbus)
		PE	EARTH

2.2 FIELDBUS CONNECTORS - only for BC, BP, EH, EW, EI, EP

1 Remove fieldbus connectors caps **P2**

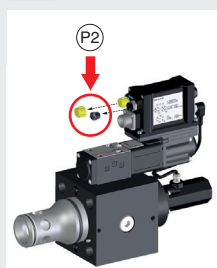


2 Select fieldbus connectors according to valve code and proceed with wirings operations

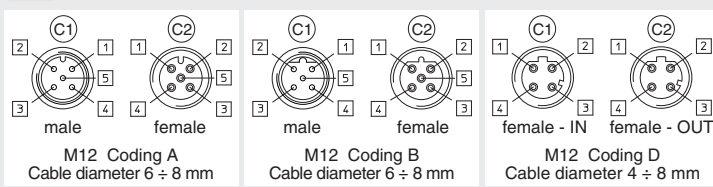


BC		BP		EH - EW - EI - EP	
1	CAN_SHLD Shield	1	+5V Termination supply signal	1	TX+ Transmitter
2	not used	2	LINE-A Bus line (high)	2	RX- Receiver
3	CAN_GND Signal zero data line	3	DGND Data line - termination signal zero	3	TX- Transmitter
4	CAN_H Bus line (high)	4	LINE-B Bus line (low)	4	RX- Receiver
5	CAN_L Bus line (low)	5	SHIELD		housing SHIELD

3 Connect the valve to the fieldbus network. For information about fieldbus terminators see **GS500**. The use of above metallic connectors is strongly recommended in order to fulfill EMC requirements.

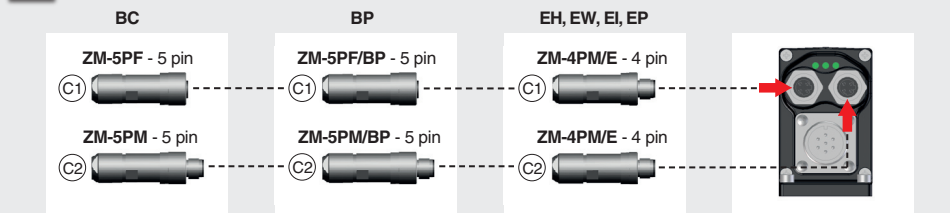


2.3 REMOTE TRANSDUCER CONNECTOR - only for SP, SL


1 Remove transducer connector cap **P3**

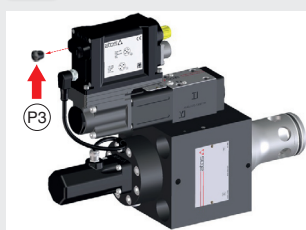

2 Proceed with wirings operations

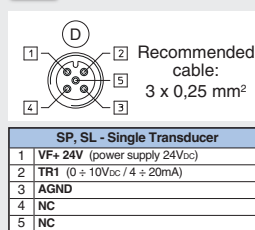


3 Connect the valve to the transducer

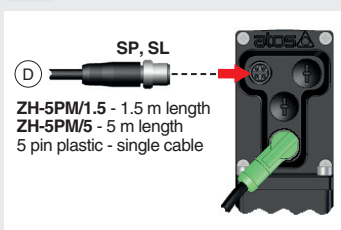


ELECTRICAL WIRING EXAMPLES

MAIN CONNECTOR - VOLTAGE


REFERENCE INPUT - DIFFERENTIAL MODE

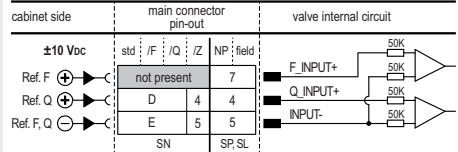


REFERENCE INPUT - COMMON MODE

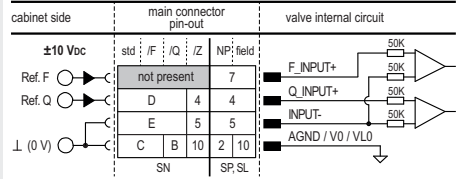

MONITOR OUTPUT

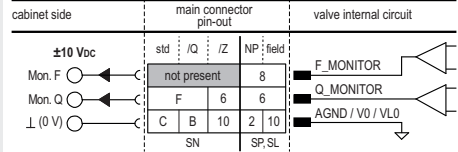

REMOTE TRANSDUCER - only for SP, SL

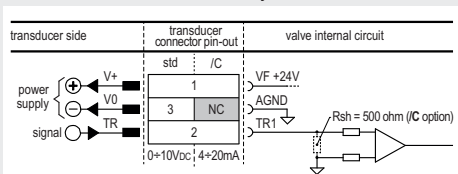

STEP 3 HYDRAULICS

Wrench type 3 mm

Tightening torque 4 Nm

Pilot air bleeding:

- release 2 or 3 turns the air bleed screw **V**
- cycle the valve at low pressure until the oil leaking from the **V** port is exempted from air bubbles
- lock the air bleed screw **V**

NOTE: to facilitate bleeding operations, apply a light backpressure (1 or 2 bar) by adding a check valve on Y line. The check valve is particularly suggested for valves size 63 to 125 installed with the solenoid upward

Consult **FS900** for general guidelines about component's commissioning

WARNING: To avoid overheating and possible damage of the electronic driver, the valves must be never energized without hydraulic supply to the pilot stage. In case of prolonged pauses of the valve operation during the machine cycle, it is always advisable to switch off or disable the driver (option /Q or /Z)

HINT ! - Wizard objects dictionary - only for BC, BP, EH, EW, EI, EP

Press **CTRL + H** on the PC keyboard to open the context help form

Move arrow on parameter (e.g. **Unit**) to display the objects dictionary information to access the parameter via fieldbus

If present **List**, press **→** to display values accepted by the parameter

Flow Reference Anal

Unit: Voltage

Unit: Voltage

Information

Unit

Standard Name: div actual val cond unit

Description: ValveFlowPosition > Ref. Analog range > Unit

Index: (hexide [117A0E])

Sub Index: (hexide [06])

Type: INTEGER

Channel Selection: Index 0x2E01 - Sub Index 0x00 - Type UNSIGNED - Value 00

List

[L] Interface Unit

Raw Value: 0


In: 0x00

Out: 0000 0000


NOTE: alternatively right click on any parameter

MAIN CONNECTOR - CURRENT


REFERENCE INPUT - DIFFERENTIAL MODE

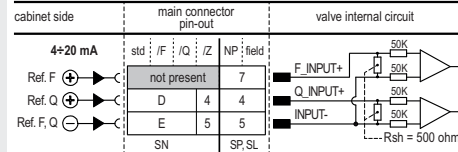

REFERENCE INPUT - COMMON MODE

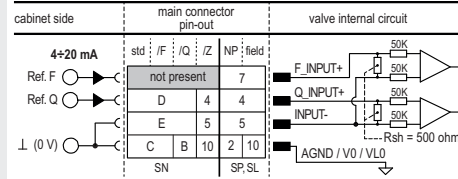

MONITOR OUTPUT

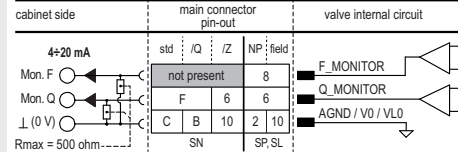

STEP 4 PC SOFTWARE


REMARK proportional valves with on-board electronics are factory preset with default parameters, only few programming operations are mandatory for:

- **BC, BP, EH, EW, EI, EP** setup the network parameters and the source of reference signals
- **SP, SF, SL** setup the feedback's scale for remote transducers and the pressure/force PID parameters

Valve programming can be performed through E-SW-SETUP software or via fieldbus (not for NP)

4.1 CONNECTION

- 1 In order to access valve parameterization:
 - Install E-SW-SETUP software on PC
 - Insert main connector to the valve and power on with 24Vdc
- 2 Remove USB plastic protection cap **P4** and connect valve to the PC as shown below via Bluetooth (adapter only) or USB (cable and isolator adapter)

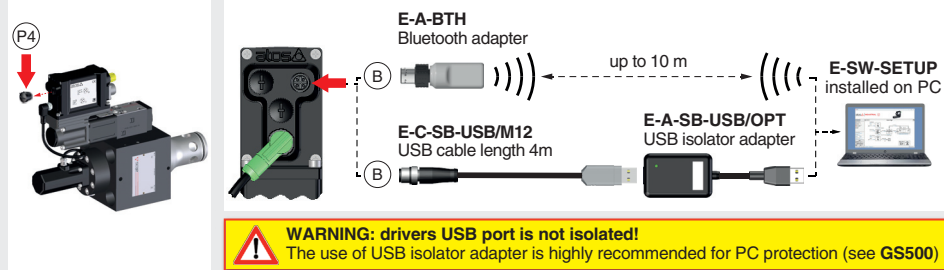

WARNING: drivers USB port is not isolated!
The use of USB isolator adapter is highly recommended for PC protection (see **GS500**)

- 3 Launch the PC software using E-SW-SETUP icon:
 - **PC software does NOT detect valid connection** communication is not established, please follow wizard procedure
 - **PC software detects valid connection** communication automatically established - valve is **ON-LINE** see
- 4 In **ON-LINE** - Wizard press button:
 - a) **WIRELESS CONNECTION** Wizard procedure for connection via Bluetooth
 - b) **CABLE CONNECTION** Wizard procedure for connection via USB cable
- 5 Communication established, valve is **ON-LINE** and it is possible change parameters

E-SW-SETUP PROGRAMMING SOFTWARE

ON-LINE - Wizard

a) WIRELESS CONNECTION

b) CABLE CONNECTION

OFF-LINE - Demo mode

SETTING FILE ARCHIVE

ON-LINE - Manual

Mandatory for direct connection to CANopen or PROFIBUS DP

NOTE: for more info about E-A-BTH Bluetooth adapter, please refer to STARTUP BLUETOOTH guide

REMARK: once removed the E-A-BTH Bluetooth adapter or E-C-SB-USB/M12 USB cable, screw the plastic protection cap **P4** applying the correct tightening torque, in order to preserve valve's IP protection characteristics

Tightening torque 0,6 Nm

4.2 FIELDBUS - Network Management - only for BC, BP, EH, EW, EI, EP

Node, Station Alias, IP Address, Baudrate, etc... can be set through:

- 1) **Machine central unit (master)** - please refer to E-MAN-S-* fieldbus protocol programming manual
- 2) **E-SW-SETUP software**
 - browse to **Network Management - Configuration** to change below default settings:

BC CANopen Configuration file: EDS

Configuration: CANopen Node 1

Speed: 50 Kbit/sec

Filter Active

BP PROFIBUS DP Configuration file: GSD

Configuration: Profibus Node 125

Telegram Selection: Telegram 5

Defaults: Telegram 3 for SN Telegram 5 for SP, SF, SL

EH EtherCAT Configuration file: XML

Configuration: Station Alias 0

Station Alias is assigned automatically by fieldbus master

EW POWERLINK Configuration file: XDD

Configuration: Node ID 125

EI EtherNet/IP Configuration file: EDS

Configuration: IP Address 0.0.0.0 Subnet Mask 0.0.0.0 Default Gateway 0.0.0.0

IP Address, Subnet Mask and Default Gateway are assigned by fieldbus master, IPconfig or BOOTP/DHCP utility

EP PROFINET Configuration file: GSDML

Configuration: IP Address 0.0.0.0 Subnet Mask 0.0.0.0 Default Gateway 0.0.0.0

IP Address, Subnet Mask, Default Gateway and Station Name are assigned automatically by fieldbus master (e.g. Discovery and Configuration Protocol)

• press **Memory Store** button and press **Save User Set** button to save new setting into the driver (see 4.6)

• network configuration settings will be applied at next driver power on or pressing the **Restart** button

NOTE: configuration files are available in MyAtos area - www.atos.com

4.3 REFERENCES - only for BC, BP, EH, EW, EI, EP

The source of reference signals for valves with fieldbus:

- is preset as **Analog** by factory default
- can be managed through machine control unit by setting the source from **Analog to Fieldbus**

1 For SN, SP, SL with fieldbus:

- in **Flow** - Reference select **Fieldbus**

2 Only for SP, SL with fieldbus:

- in **Pressure** - Reference select **Fieldbus**

Signals

Reference: Analog

Setpoint: 0.0 %

Demand: 0.0 %

Actual: 0.0 %

PID Out: 0.0 %

Flow

Pressure

Press. PID: PID1

Pilot: 0.0 %

Driver Memories

Valve: User

Driver Status

Status: Active

Alarm: No Alarm

Stored Alarms

4.4 p/Q SETUP - only for SP, SL

The scaling procedure of the remote transducers feedbacks and pressure/force PID tuning are mandatory! Please refer to E-MAN-RI-LES-S operating manual.


WARNING: the system may be damaged and/or perform uncontrolled movements, due to vibrations and/or undesired transitions between controls **p** and **Q** or not executing at all the pressure/force limitation, if the operations listed in this paragraph are not performed.

4.5 SMART TUNING - E-SW-SETUP

Smart tuning allows to adjust the valve dynamic response in order to match different performance requirements.

The valve is provided with 3 factory setting for the poppet control:

- dynamic** fast response time and high sensitivity for best dynamic performances (default factory setting)
- balanced** average response time and sensitivity suitable for major applications
- smooth** attenuated response time and sensitivity to improve control stability in critical applications or in environments with electrical disturbances

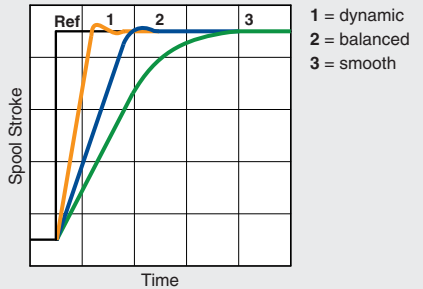

4.6 STORE

Parameters modifications will be stored into driver permanent memory:

- press **Memory Store** button to access **Driver - Memory Save** window
- press **Save User Set** button to store **Valve Parameters**

WARNING: during valve parameters storing operations, the driver automatically shuts down the solenoid power supply for a short time. Do not perform any storing commands while the system is working.

4.7 BACK UP

Parameter modifications will be saved into PC memory:

- press **Save** button to access **Computer SW Archive - Setting Files** page, **Setting File Name** pop-up appears
- input a valid name into **Description** field and press **Ok** button

STEP 5 MOBILE APP

ATOS CONNECT for smartphones and tablets is a free downloadable app which allows quick access to valve main functional parameters and configuration via Bluetooth, thus avoiding physical cable connection and significantly reducing commissioning times.

ATOS CONNECT app requirements:

- iOS 14 / Android 9
- Bluetooth Low Energy (BLE), version 4.2 or higher
- Atos digital valves/drivers equipped with E-A-BTH Bluetooth adapter or with built-in Bluetooth

Download on the App Store

GET IT ON Google Play

EXPLORE IT ON AppGallery

TROUBLESHOOTING

- Valve vibration or noise**
- presence of air in the solenoid; perform air bleeding procedure – see STEP 3

- The valve does not follow the reference signal**
- valve is powered off, verify presence of 24 Vdc power supply
 - valve is disabled, verify presence of 24 Vdc on enable pin - only for /Q and /Z options
 - spool sticking, contact Atos service center
 - missing piloting pressure, verify that hydraulic power level is compliant with valve's characteristics

- PC software parameters modifications are lost when valve is switched off**
- parameter store operation was not performed, check store procedure – see STEP 4, section 4.6

- PC software parameters modifications have no effect on the valve**
- valve is OFF LINE, check connection procedure – see STEP 4, section 4.1

- After the modifications of PC software parameters the valve does not work properly**
- restore valve factory parameters using 'Load Factory Set' button, located in 'Driver - Memory Save' window:
 - during restore, the current to the solenoid(s) will be temporarily switched to off!
 - factory parameters will be applied at next driver restart or after power off-on sequence!