

PILOTED OPERATED PROPORTIONAL DIRECTIONAL VALVES

Valve model:


DPZO-AES-1 DPZO-AES-2 DPZO-AES-4 DPZO-AES-6

Driver model:


E-RI-AES

IDENTIFICATION

Valve identification plates and label

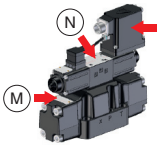


Valve name plate : M

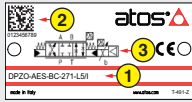


1 : valve code
2 : valve matrix code
3 : valve hydraulic symbol

Pilot valve name plate : N

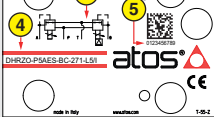





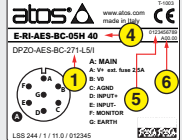



4 : pilot valve code
5 : pilot valve matrix code
6 : pilot hydraulic symbol

Driver label : L








4 : driver code
5 : driver serial number
6 : factory firmware version

INSTALLATION TOOLS ACCORDING TO VALVE MODEL- not included

Fastening bolts	Wrenches	Main connectors	Fieldbus connectors	Transducer cable
		<div><div>std./Q</div></div> <div><div>/Z, /W</div></div>	<div><div>BC</div></div> <div><div>BP</div></div> <div><div>EH</div></div>	<div><div>/W</div></div>
see STEP 1 and STEP 3		see STEP 2.1	see STEP 2.2	see STEP 2.3

PROGRAMMING TOOLS - not included

PC software	mobile App	Bluetooth	OR	USB connection KIT
		<div>Adapter </div>		<div>Cable </div> <div>Isolator </div>
E-SW-SETUP	Atos CONNECT	E-A-BTH		E-C-SB-USB/M12 E-A-SB-USB/OPT


NOTE: Atos CONNECT supports Atos digital valve drivers equipped with E-A-BTH or with built-in Bluetooth, see STEP 5

PC SOFTWARE

E-SW-SETUP	supports	NP (USB)	IL (IO-Link)	PS (Serial)	IR (Infrared)
		BC (CANopen)	BP (PROFIBUS DP)	EH (EtherCAT)	
		EW (POWERLINK)	EI (EtherNet/IP)	EP (PROFINET RT/IRT)	
	supports	valves with SP, SF, SL alternated p/Q control			

REMARK Atos PC software is designed for Windows based operative systems - Windows 10 or later

PC SOFTWARE DOWNLOAD



WELCOME
enter your email
Password
Forgot your password?
Register

Download PC software at www.atos.com accessing to "MyAtos -> Download area electronics"

Free registration by filling the form at www.atos.com/en-it/login
E-SW-SETUP is free and available in Download area

RELATED DOCUMENTATION - www.atos.com

FS900 Operating and maintenance information - tech. table	STARTUP BLUETOOTH Bluetooth adapter startup guide
FS170 DPZO positive spool overlap - tech. table	E-MAN-RI-AES AES - driver operating manual
P005 Mounting surface - tech. table	E-MAN-S-BC CANopen protocol programming manual
GS500 Programming tools - tech. table	E-MAN-S-BP PROFIBUS DP protocol programming manual
GS510 Fieldbus - tech. table	E-MAN-S-EH EtherCAT protocol programming manual
K800 Electric and electronic connectors - tech. table	

ATTENTION !

The purpose of this quickstart guide is show a logical sequence of basic operations. This guide does not cover all details or variants of Atos valves. All operations described in this document should be performed only by qualified personnel. Operations and images could be subject to change without notice. For further information please refer to related documentation.

PRODUCTS OVERVIEW

EH

STEP 2.2

STEP 4

STEP 2.3

BP

STEP 2.2

STEP 2.3

STEP 4

BC

STEP 1


STEP 3

STEP 2.1

INSTALLATION

STEP 1	STEP 2	STEP 3	STEP 4	STEP 5
MECHANICAL	ELECTRICAL	HYDRAULICS	PC SOFTWARE	MOBILE APP

STEP 1 MECHANICAL

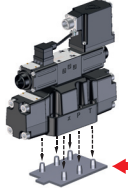

In case of first commissioning, before the valve installation the whole system must be correctly flushed to grant the required cleanliness level


During the flushing operation use on-off or by-pass valves in place of the proportional valve

- remove protection pad **P1** located on the valve bottom face only immediately before installation (do not remove connectors caps)
- check the presence and correct positioning of the seals on valve ports
- verify that valve mounting surface is clean and free from damages or burrs
- verify the correct valve orientation according to the pattern of the relevant mounting interface
- lock the fastening bolts respecting below sequence and tightening torque according to valve model

DPZO-AES-*1

Mounting surface layout

4401-05-05-0-05

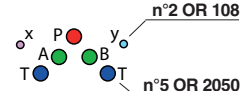

Valve size ISO 4401: 10

Fastening bolts
socket head screws

n°4 M6x40
class:12.9


wrench
5 mm

Tightening torque: 15 Nm

DPZO-AES-*2

Mounting surface layout

4401-07-07-0-05

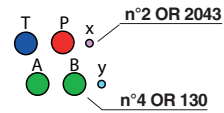

Valve size ISO 4401: 16

Fastening bolts
socket head screws

n°4 M10x50
class:12.9

wrench
5 mm

n°2 M6x45
class:12.9


wrench
8 mm

Tightening torque:
15 Nm for M6
70 Nm for M10

DPZO-AES-*4

Mounting surface layout

4401-08-08-0-05

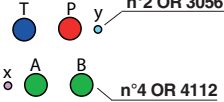

Valve size ISO 4401: 25

Fastening bolts
socket head screws

n°6 M12x60
class:12.9


wrench
10 mm

Tightening torque: 125 Nm

DPZO-AES-*6

Mounting surface layout

4401-10-09-0-05

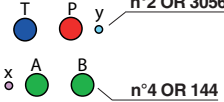

Valve size ISO 4401: 32

Fastening bolts
socket head screws

n°6 M20x90
class:12.9

wrench
17 mm


Tightening torque: 600 Nm

STEP 2 ELECTRICAL


This section considers the different valves options, illustrating the multiple variants of the available electrical connections. The electrical connections have to be wired according to the selected valve code


2.1 MAIN CONNECTOR

1 Remove main connector cap **P2**

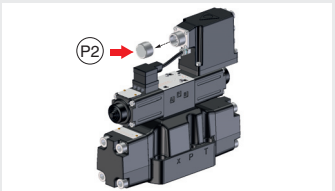

2 Select main connector according to valve code and proceed with wirings operations

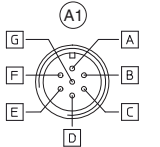

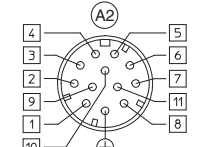


Recommended LiYCY shielded cables:
7 x 0,75 mm² max 20 m
7 x 1 mm² max 40 m

Recommended LiYCY shielded cable:
12 x 0,75 mm² max 20 m

3 Connect the valve to the system

ZM-7P - 7 pin
MAIN CONNECTOR

ZM-12P - 12 pin
MAIN CONNECTOR

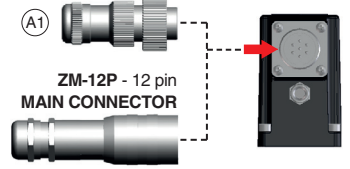

NOTE: the use of above metallic connectors is strongly recommended in order to fulfill EMC requirements


WARNING: remove power supply before any electrical or wiring operations

WARNING: a safety fuse is required in series to driver power supply - 2,5 A time lag fuse


2.2 FIELDBUS CONNECTORS

1 Remove fieldbus connectors caps **P3**


BC, BP

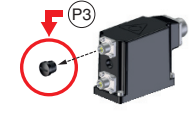



EH

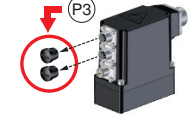

2 Select fieldbus connectors according to valve code and proceed with wirings operations

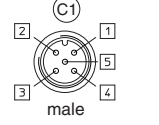

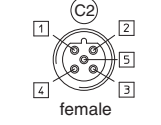

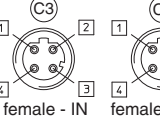

M12 Coding A
Cable diameter 6 ÷ 8 mm

M12 Coding B
Cable diameter 6 ÷ 8 mm

M12 Coding D
Cable diameter 4 ÷ 8 mm

BC	BP	EH
1 CAN_SHLD Shield	1 +5V Termination supply signal	1 TX+ Transmitter
2 not used	2 LINE-A Bus line (high)	2 RX- Receiver
3 CAN_GND Signal zero data line	3 DGND Data line - termination signal zero	3 TX- Transmitter
4 CAN_H Bus line (high)	4 LINE-B Bus line (low)	4 RX- Receiver
5 CAN_L Bus line (low)	5 SHIELD	housing SHIELD

3 Connect the valve to the fieldbus network. For information about fieldbus terminators see GS500

BC

ZM-5PF - 5 pin

C1

BP

ZM-5PM/BP - 5 pin

C2

EH

ZM-4PM/E - 4 pin

C3

ZM-4PM/E - 4 pin


C4

NOTE: the use of above metallic connectors is strongly recommended in order to fulfill EMC requirements


2.3 REMOTE TRANSDUCER CONNECTOR - only for /W option

1 Remove transducer connector cap **P4**


BC, BP

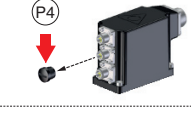

EH

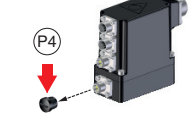

2 Proceed with wirings operations

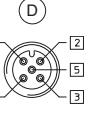


/W option

1 VF+ 24V (power supply 24Voc)
2 TR1 (0 ÷ 10Voc / 4 ÷ 20mA)
3 AGND
4 NC
5 NC

Recommended cable:
3 x 0,25 mm²


3 Connect the valve to the transducer

BC, BP

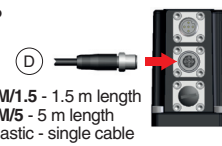

ZH-5PM/1.5 - 1.5 m length
ZH-5PM/5 - 5 m length
5 pin plastic - single cable

EH

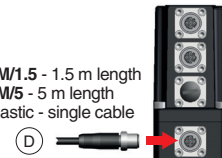


ZH-5PM/1.5 - 1.5 m length
ZH-5PM/5 - 5 m length
5 pin plastic - single cable


Atos spa - Italy - 21018 Sesto Calende

ELECTRICAL WIRING EXAMPLES


MAIN CONNECTOR - VOLTAGE

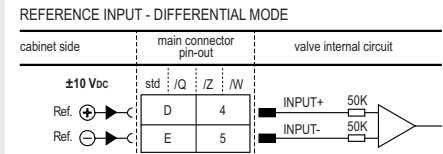


REFERENCE INPUT - COMMON MODE

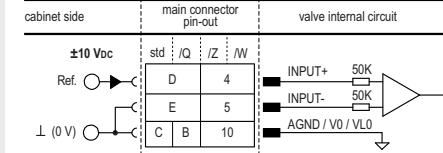


MAIN CONNECTOR - MONITORS VOLTAGE ONLY

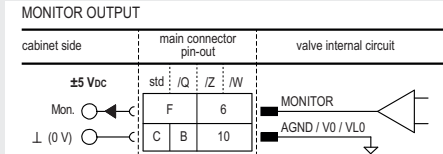

REMOTE TRANSDUCER - only for /W option

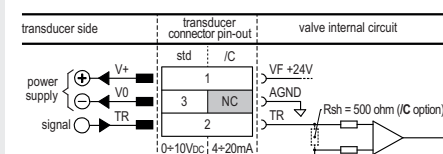

STEP 3 HYDRAULICS

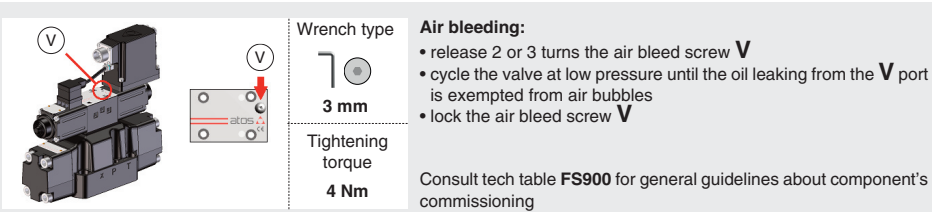


HINT ! - Wizard objects dictionary - only for BC, BP, EH

Press **CTRL + H** on the PC keyboard to open the context help form


Move arrow on parameter (e.g. **Unit**) to display the objects dictionary information to access the parameter via fieldbus

If present **List**, press to display values accepted by the parameter

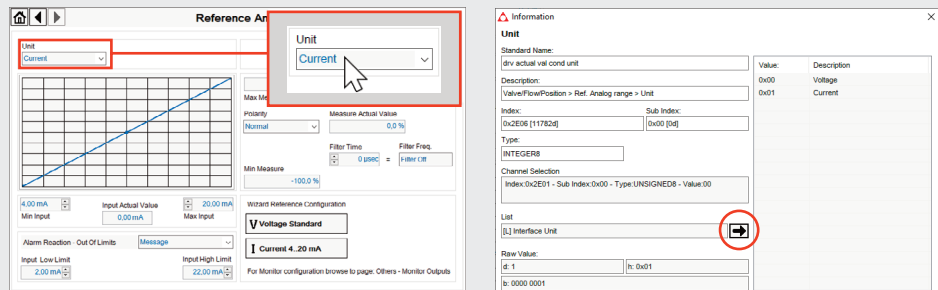


NOTE: alternatively right click on any parameter


MAIN CONNECTOR - CURRENT

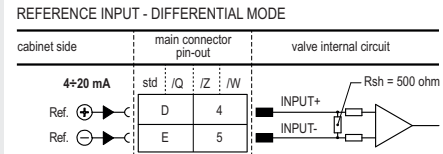

REFERENCE INPUT - COMMON MODE

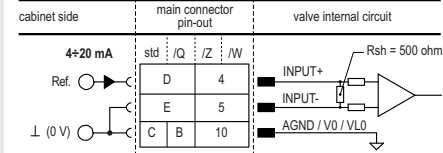

MONITOR2 OUTPUT - only for /W option

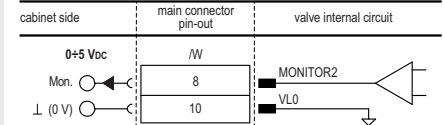

STEP 4 PC SOFTWARE

REMARK proportional valves with on-board electronics are factory preset with default parameters, only few programming operations are mandatory for:


- setup the network parameters and the source of reference signals
 - setup the feedback's scale for remote transducers only for /W option; please refer the E-MAN-RI-AES manual
- Valve programming can be performed through E-SW-SETUP software or via fieldbus

4.1 CONNECTION

1 In order to access valve parameterization:

- Install E-SW-SETUP software on PC
- Insert main connector to the valve and power on with 24Vdc

2 Remove USB plastic protection cap **P5** and connect valve to the PC as shown below via Bluetooth (adapter only) or USB (cable and isolator adapter)

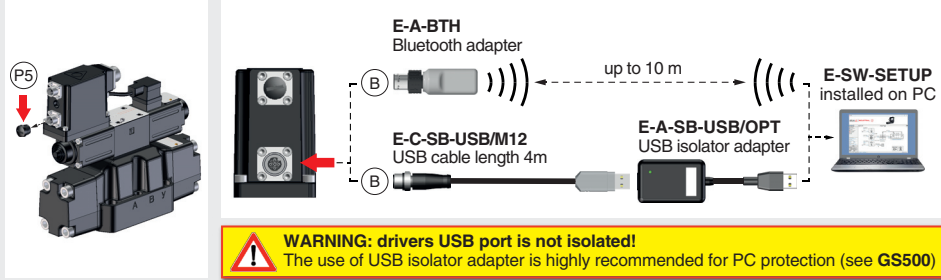


3 Launch the PC software using E-SW-SETUP icon:

- **PC software does NOT detect valid connection**
communication is not established, please follow wizard procedure
- **PC software detects valid connection**
communication automatically established - valve is **ON-LINE** see

4 In **ON-LINE** - Wizard press button:

- a) : WIRELESS CONNECTION**
Wizard procedure for connection via Bluetooth
- b) : CABLE CONNECTION**
Wizard procedure for connection via USB cable

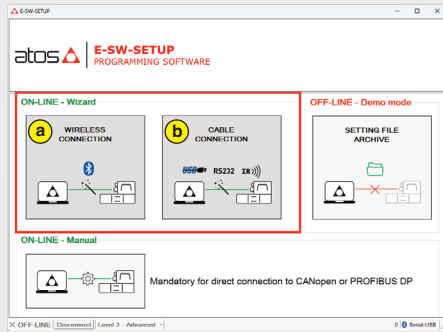


NOTE: for more info about E-A-BTH Bluetooth adapter, please refer to STARTUP BLUETOOTH guide

REMARK: once removed the E-A-BTH Bluetooth adapter or E-C-SB-USB/M12 USB cable, screw the plastic protection cap **P5** applying the correct tightening torque, in order to preserve valve's IP protection characteristics

4.2 FIELDBUS - Network Management

Node, Station Alias, IP Address, Baudrate, etc... can be set through:

- 1) **Machine central unit (master)** - please refer to E-MAN-S-** fieldbus protocol programming manual
- 2) **E-SW-SETUP**
 - browse to **Network Management - Configuration** to change below default settings:

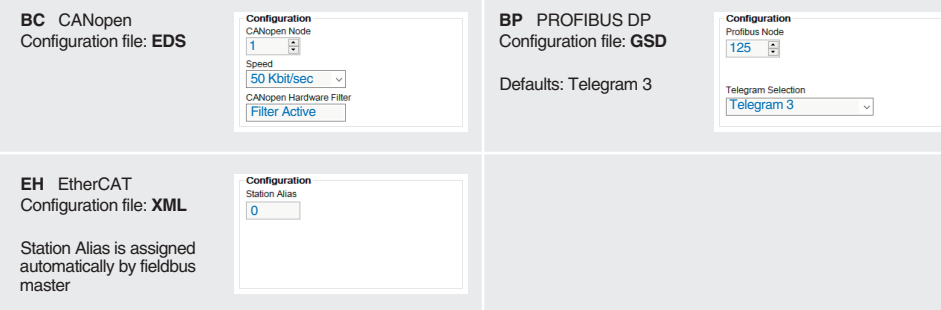

- press **Memory Store** button and press **Save User Set** button to save new setting into the driver (see 4.4)
- network configuration settings will be applied at next driver power on or pressing the **Restart** button


NOTE: configuration files are available in MyAtos area - www.atos.com

4.3 REFERENCES

The source of reference signals for valves with fieldbus:

- is preset as **Analog** by factory default
- can be managed through machine control unit by setting the source from **Analog** to **Fieldbus**

In Valve - Reference select **Fieldbus**

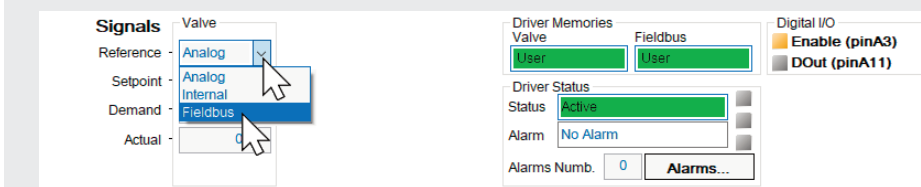

4.4 STORE

Parameters modifications will be stored into driver permanent memory:

- press **Memory Store** button to access **Driver - Memory Save** window
- press **Save User Set** button to store **Valve Parameters**


WARNING: during valve parameters storing operations, the driver automatically shuts down the solenoid power supply for a short time. Do not perform any storing commands while the system is working.

4.5 BACK UP

Parameter modifications will be saved into PC memory:

- press **Save** button to access **Computer SW Archive - Setting Files** page, **Setting File Name** pop-up appears
- input a valid name into **Description** field and press **Ok** button

STEP 5 MOBILE APP

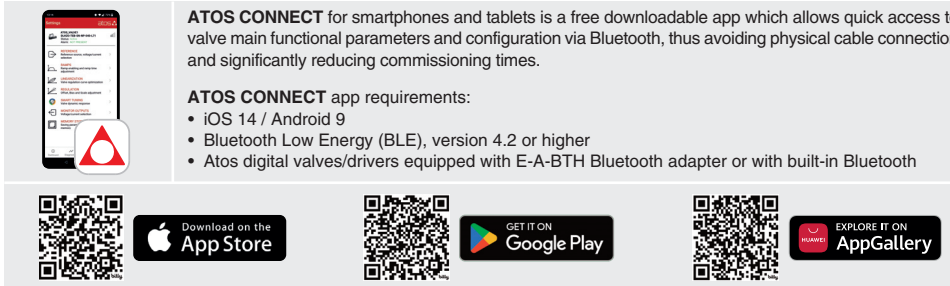

TROUBLESHOOTING

Valve vibration or noise

- presence of air in the solenoid; perform air bleeding procedure – see STEP 3
- dither frequency too low; increase value of the frequency – please refer to E-MAN-RI-AES operating manual

The valve does not follow the reference signal

- valve is powered off, verify presence of 24 Vdc power supply
- valve is disabled, verify presence of 24 Vdc on enable pin - only for /Q, /Z and /W options
- flow/pressure values exceeding the valve's performance limits, verify that hydraulic operating conditions are in compliance with the valve's characteristics
- big hysteresis or spool stick-slip, reduce the dither frequency
- spool sticking, contact Atos service center
- missing piloting pressure, verify that hydraulic power level is compliant with valve's characteristics
- wrong pilot/drain configuration - check if the pilot/drain configuration of the valve corresponds to the effective system layout

PC software parameters modifications are lost when valve is switched off

- parameter store operation was not performed, check store procedure – see STEP 4, section 4.4

PC software parameters modifications have no effect on the valve

- valve is OFF LINE, check connection procedure – see STEP 4, section 4.1

After the modifications of PC software parameters the valve does not work properly

- restore valve factory parameters using 'Load Factory Set' button, located in 'Driver - Memory Save' window:
 - during restore, the current to the solenoid(s) will be temporarily switched to off!
 - factory parameters will be applied at next driver restart or after power off-on sequence!